Asennusohje

Noudata numeroituja alkuperäiskuvia. Käytä kunkin vaiheen yhteydessä ilmoitettuja ruuveja ja kiinnikkeitä; merkinnät on säilytetty kuvissa. Radio ei sisälly asennussarjaan.

1. Kytke liitäntäkaapeli pääyksikköön.

2. Yhdistä pääyksikkö kuvassa esitettyyn kiertomekanismin osaan.

3. Kiinnitä kiertomekanismin toinen osa kuvan mukaisesti.

4. Yhdistä pääyksikkö metallikannakkeeseen ja kiinnitä kokonaisuus autoon.

5. Yhdistä pääyksikkö radiokehykseen.

6. Yhdistä pääyksikkö näytön jalustaan.


7. Yhdistä näyttö näytönpitimeen.

8. Asenna pääyksikkö ja kiinnitä näyttö.

DVN-T5APT · Asennusohje


DVN-T5APT Assembly Instruction

1

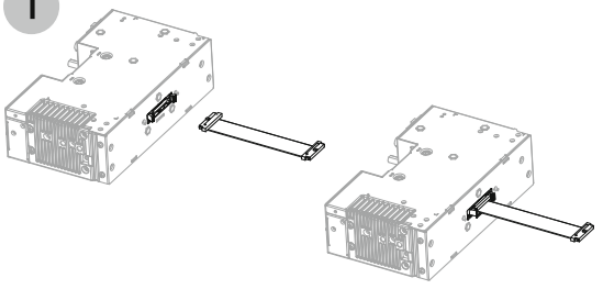


Connect the connection cable to the main unit

2

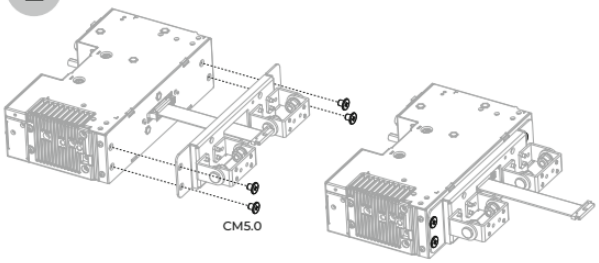


Put the main unit and rotary damper together

3

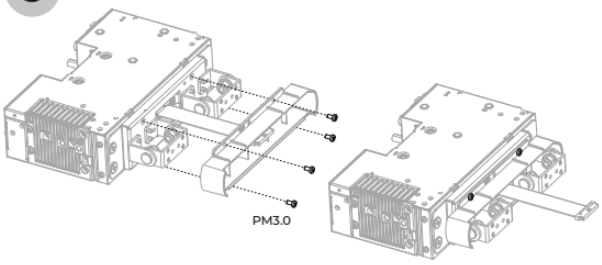


Put the main unit and rotary damper together

4

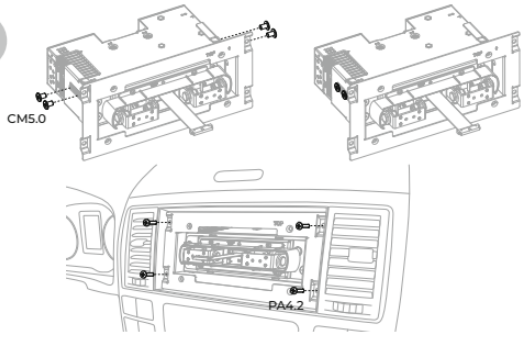


Put the main unit and metal bracket together
and fix the main unit with bracket to the car

5

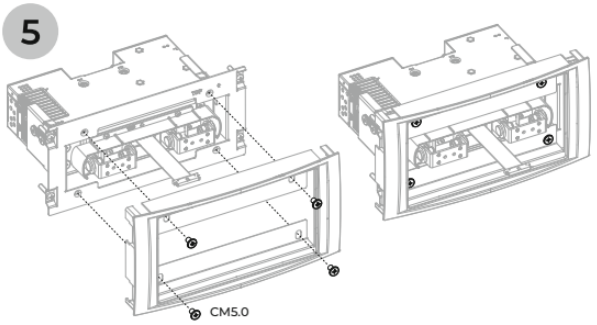


Put the main unit and radio bezel together

6

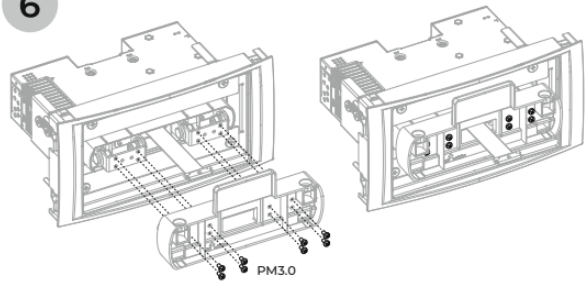


Put the radio main unit and monitor stand together

7

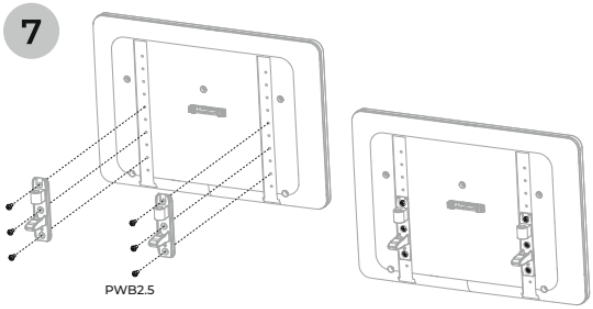

Put the display and the display holder together

8

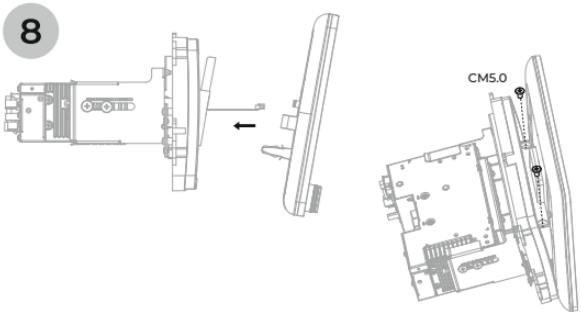

Install the radio main unit and fix the display