

Navigation User Manual

Table of contents

1 Warnings and safety information 2
2 Getting Started 2
2.1 Update Map 2
2.2 Navigation Voice 2
2.3 Navigation Style 4
2.4 Map Label 7
2.5 Selecting Distance Unit 8
3 General Settings 10
3.1 Adjusting Navigation Volume and Warning Volume 10
3.2 2D and 3D Map Settings 12
3.3 Smart Zoom Features 13
3.4 Route Settings 14
3.5 Truck Map Settings 16
3.6 Speed Limit Warning 18
3.7 Online-TMC Function 21
4 Start Navigation 21

1 Warnings and safety information

The navigation system helps you find your way to your destination with the built-in GPS receiver. The navigation system does not transmit your GPS position; others cannot track you.
It is important to look at the display only when it is safe to do so. If you are the driver of the vehicle, we recommend that you plan and review your route before you start your journey. Plan the route before your departure and stop if you need to change the route.

2 Getting Started


Dynaway navigation software is optimized for in-car use. You can use it easily by tapping the screen buttons and the map with your fingertips.


2.1 Update Map


You can download countries or regions maps to your Dynavin radio so you can plan your route and navigate offline. Simply login flex.dynavin.com website with your Dynavin radio's serial number, download the latest map file and follow the instructions on the website to import it into your Dynavin radio. We guarantee that you will have access to the same quarter maps as you first used Dynaway. For more information about upgrades, please visit flex.dynavin.com.


2.2 Navigation Voice


You can select the desired navigation voice by the following steps:

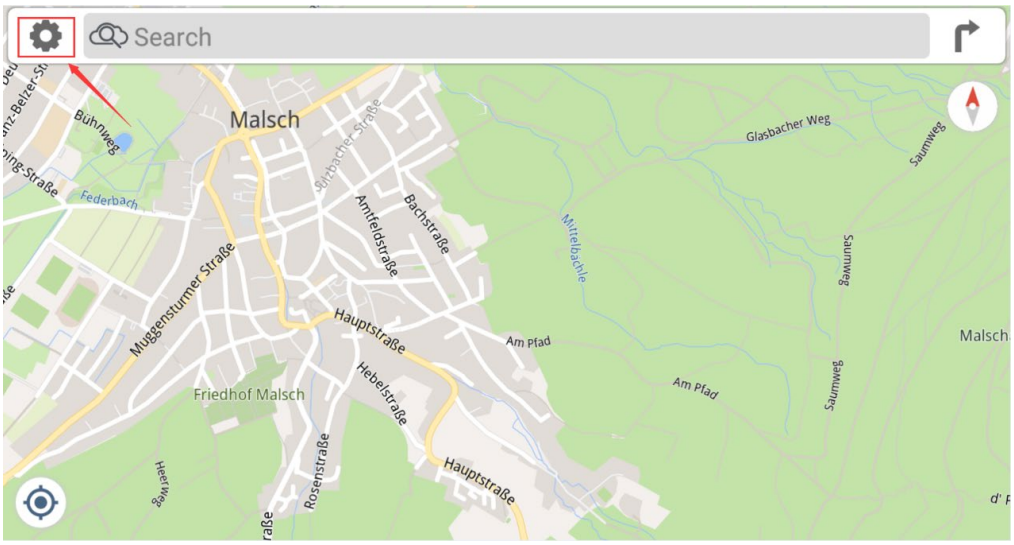
Search
Malsch
Bühnweg
Federbach
Amtfeldstraße
Bachstraße
Mittelbachle
Glasbacher Weg
Saumweg
Muggensturmer Straße
Hauptstraße
Am Pfad
Hebelstraße
Friedhof Malsch
Rosenstraße
Malsch

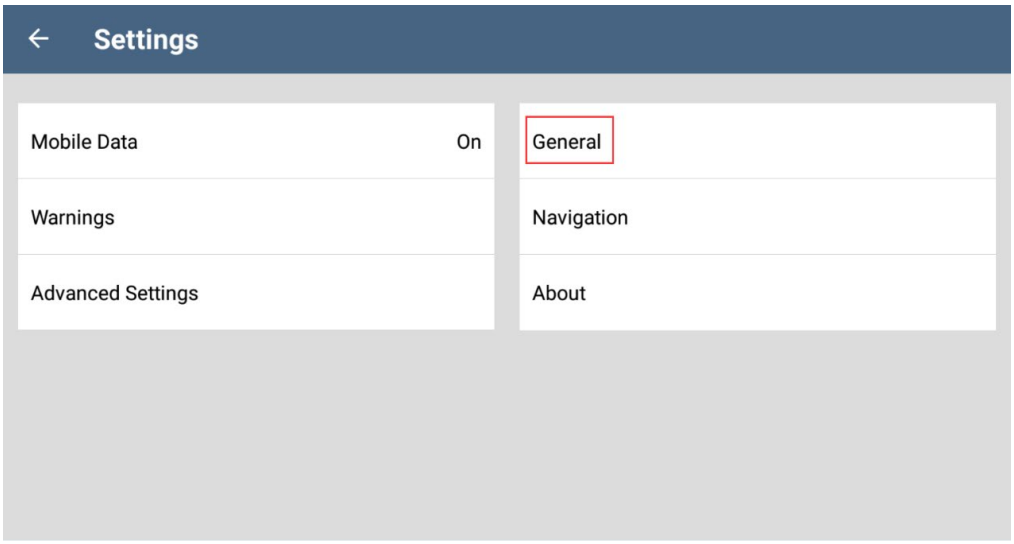
Settings
Mobile Data
On
Warnings
Advanced Settings
General
Navigation
About

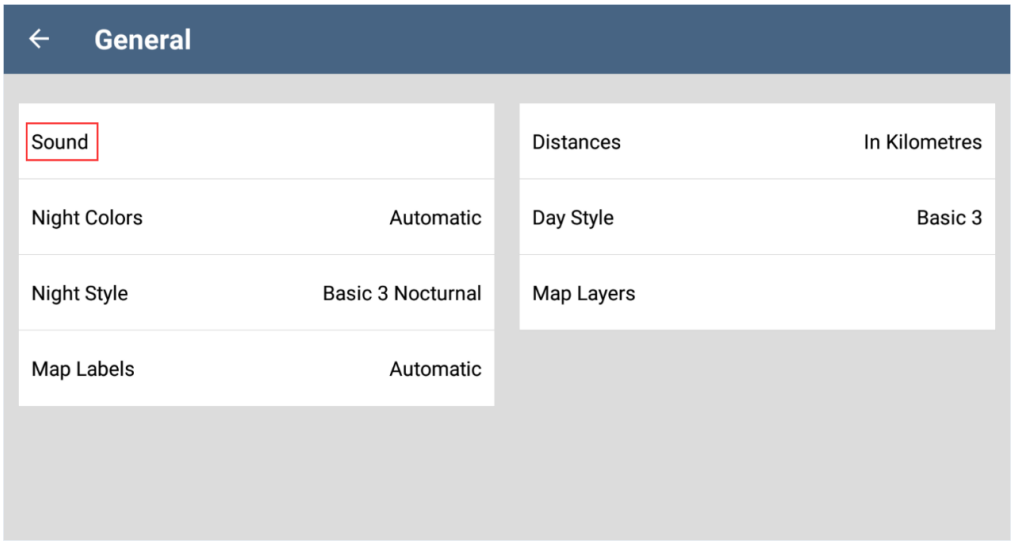

General
Sound
Night Colors
Automatic
Night Style
Basic 3 Nocturnal
Map Labels
Automatic
Distances
In Kilometres
Day Style
Basic 3
Map Layers

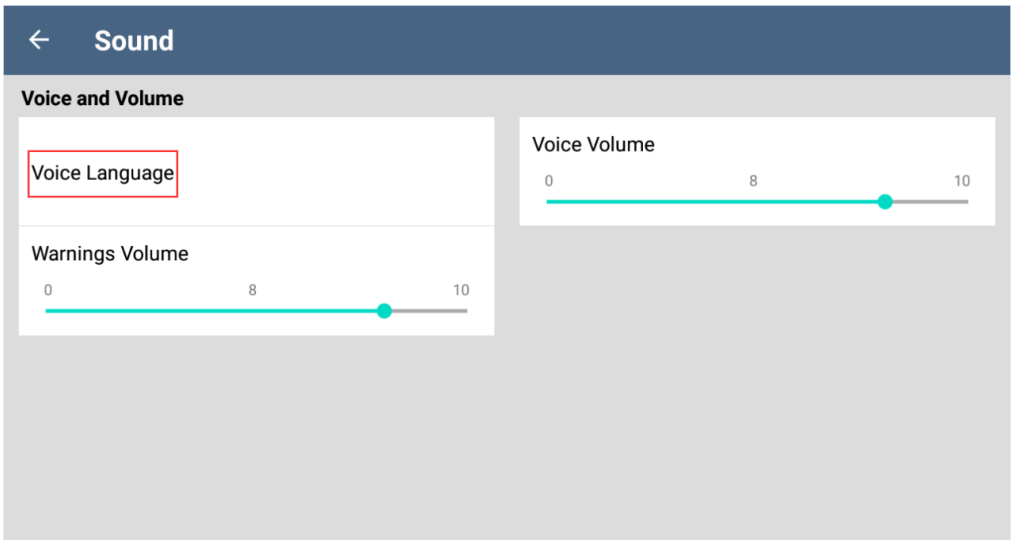


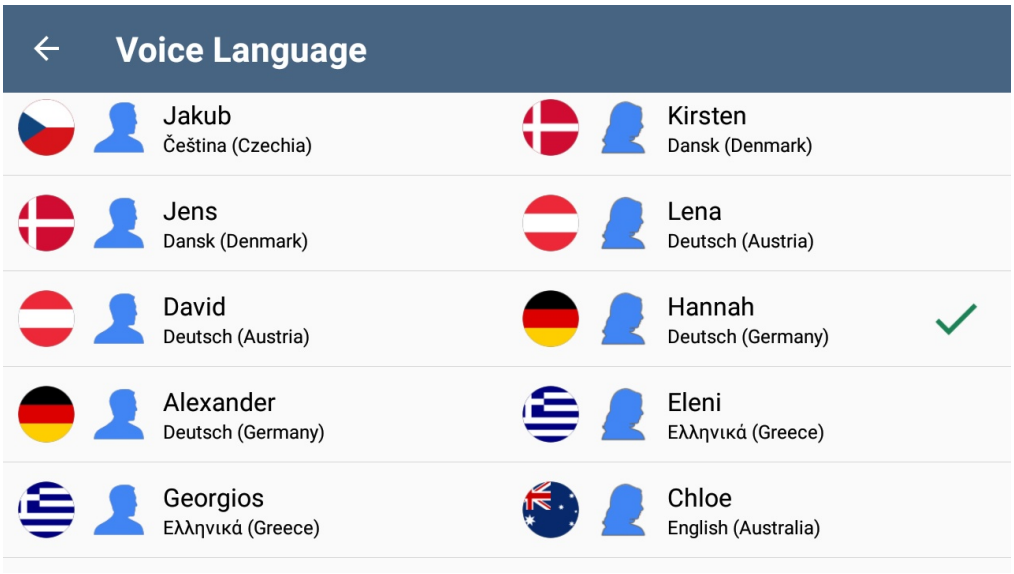


2.3 Navigation Style


You can select navigation style by the following steps;

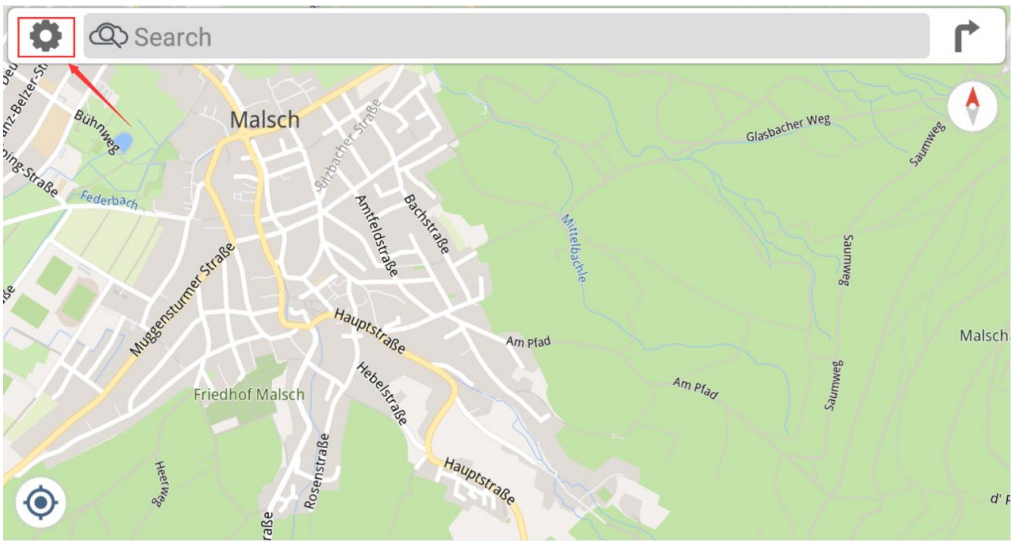

Search
Malsch
Bühnweg
Federbach
Gärtnacher-Straße
Amtfeldstraße
Bachstraße
Glasbacher Weg
Saumweg
Mittelbachle
Muggensturmer Straße
Hauptstraße
Am Pfad
Hebelstraße
Friedhof Malsch
Rosenstraße
Malsch

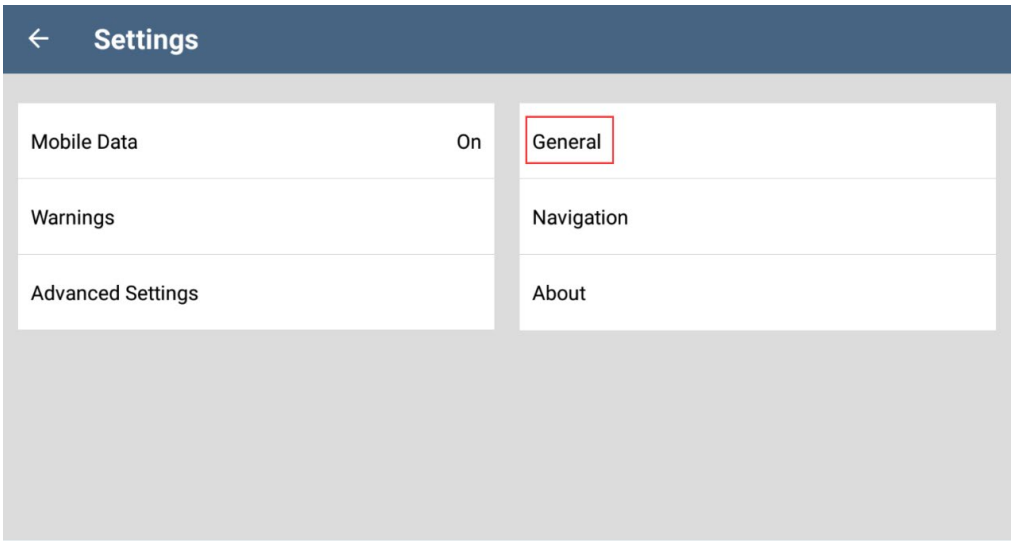
Settings
Mobile Data
On
Warnings
Advanced Settings
General
Navigation
About

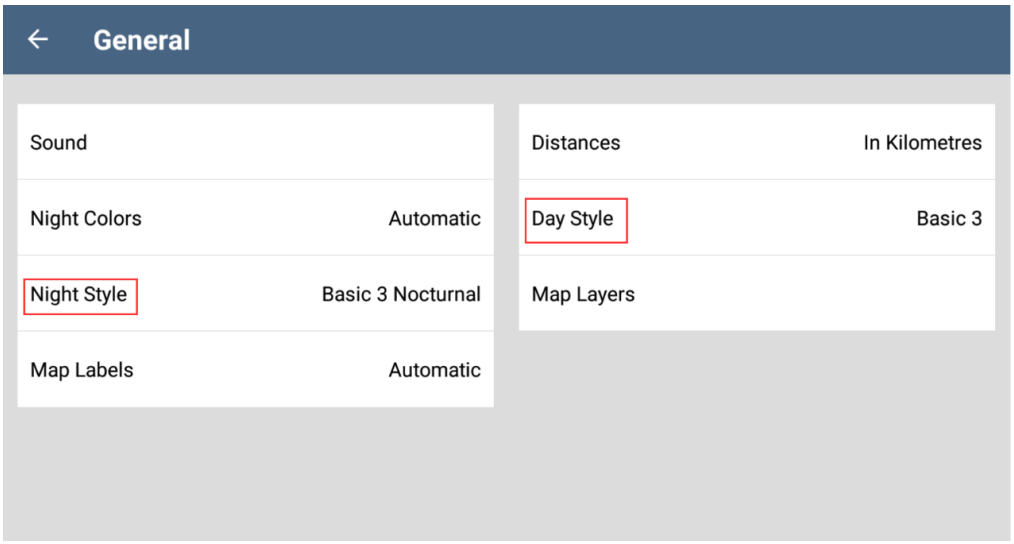

General
Sound
Night Colors
Automatic
Night Style
Basic 3 Nocturnal
Map Labels
Automatic
Distances
In Kilometres
Day Style
Basic 3
Map Layers


and you can select the desired display mode for Day style and Night style.

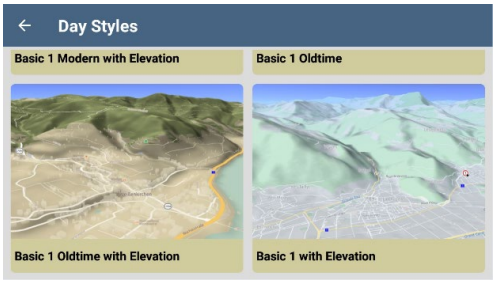

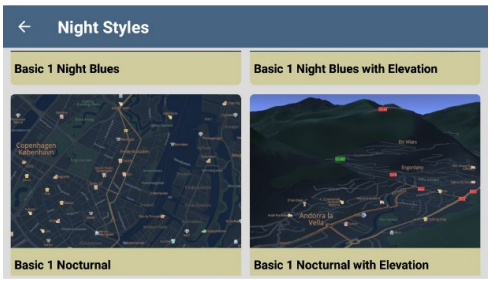

Also Dynaway navigation software supports to switch Day style and Night style automatically.

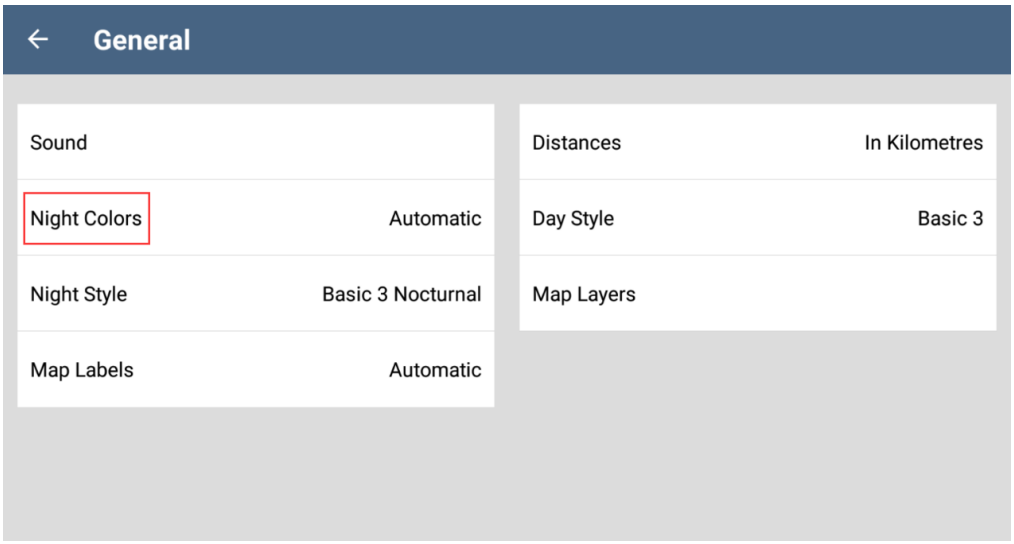


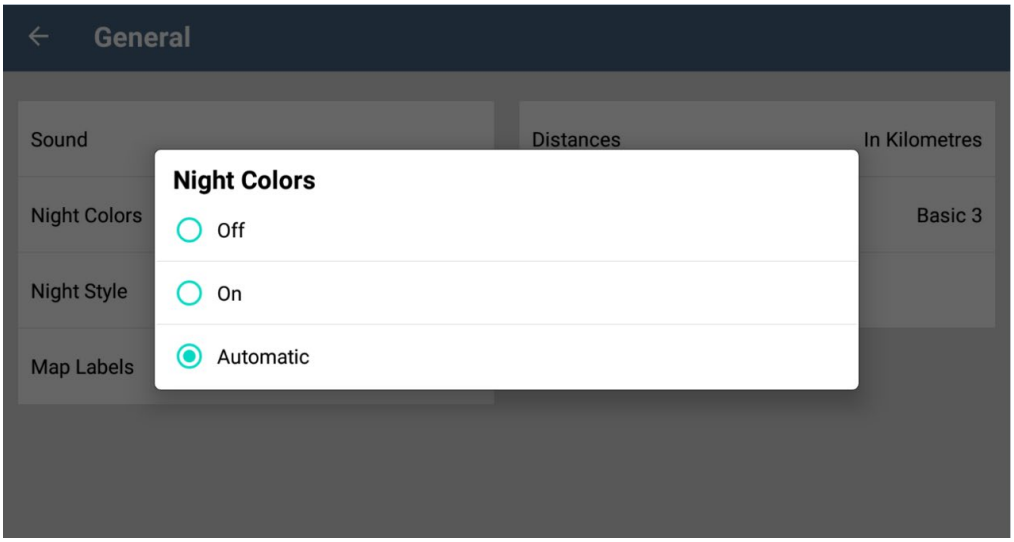


Off: Night style off
On: Night style on
Automatic: Day style and night style switch automatically


2.4 Map Label

With Dynaway navigation software, if the map data contains the local name of that country or region, area names, place names, and street names will be displayed in local language; you can set up by the following steps:

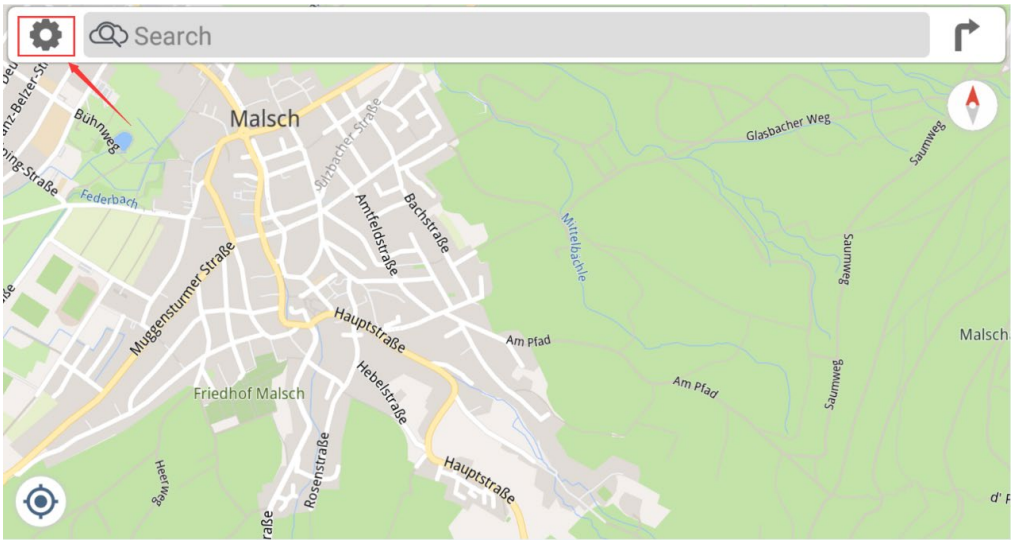

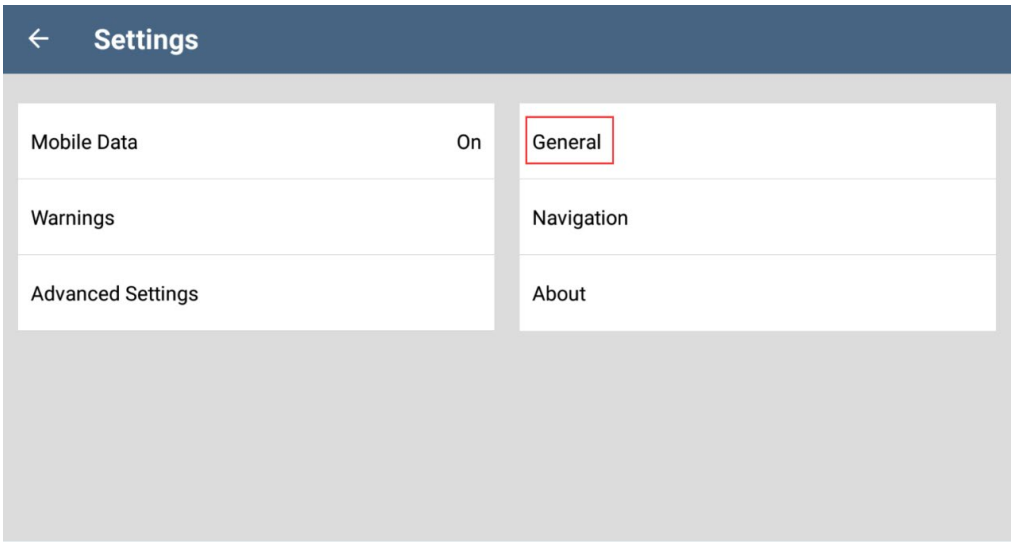





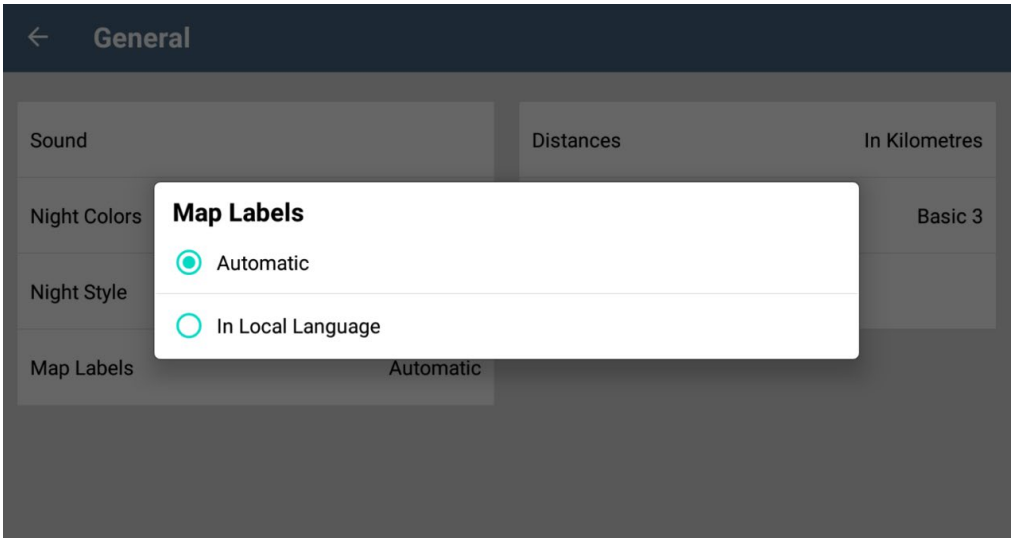



2.5 Selecting Distance Unit

You can select the desired distance unit by the following steps, the default value is “In Kilometres” and permanent if you do not change it by manually.

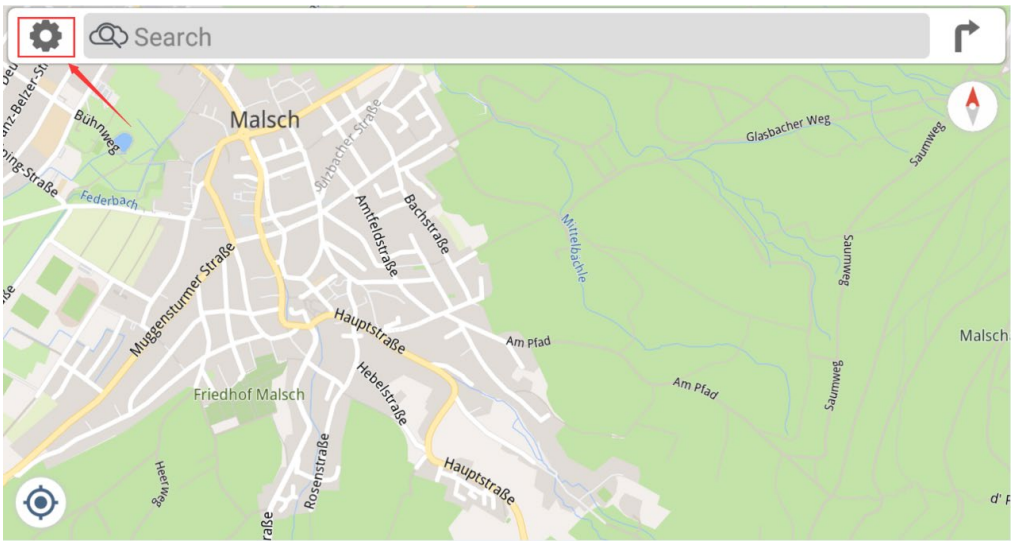
Search
Malsch
Bühnweg
Federbach
Amtfeldstraße
Bachstraße
Glasbacher Weg
Saumweg
Mittelbachle
Muggensturmer Straße
Hauptstraße
Am Pfad
Hebelstraße
Friedhof Malsch
Rosenstraße
Hauptstraße

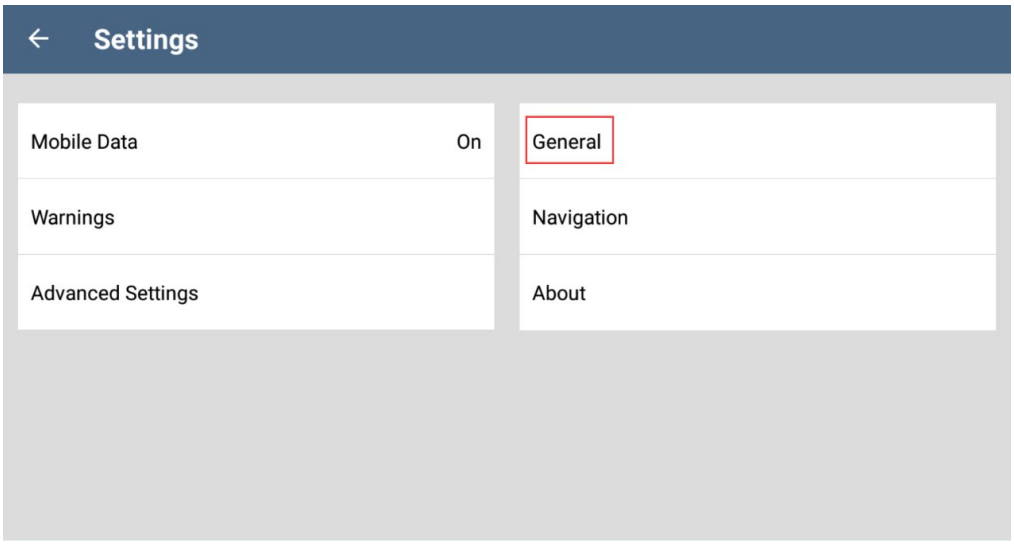
Settings
Mobile Data
On
Warnings
Advanced Settings
General
Navigation
About

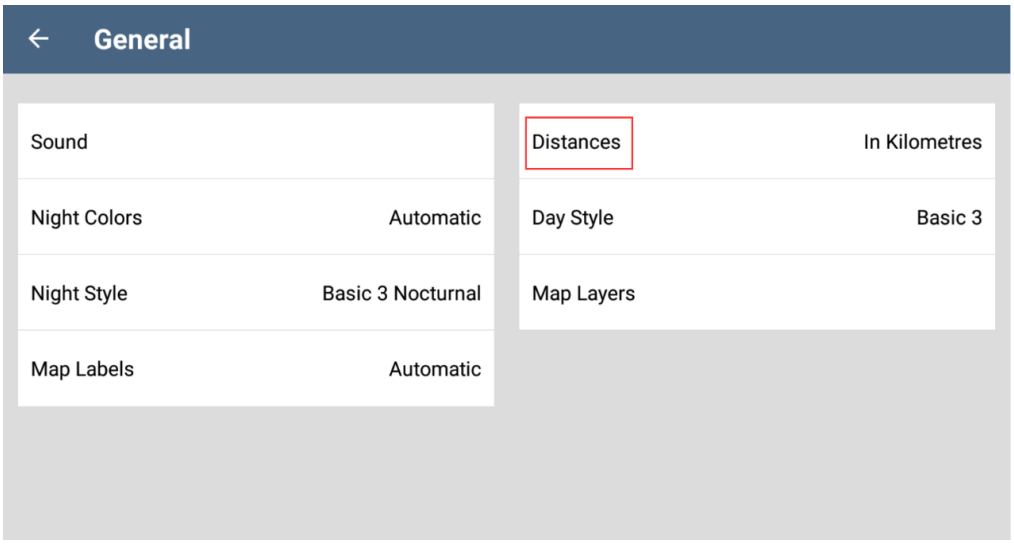

General
Sound
Night Colors
Automatic
Night Style
Basic 3 Nocturnal
Map Labels
Automatic
Distances
In Kilometres
Day Style
Basic 3
Map Layers

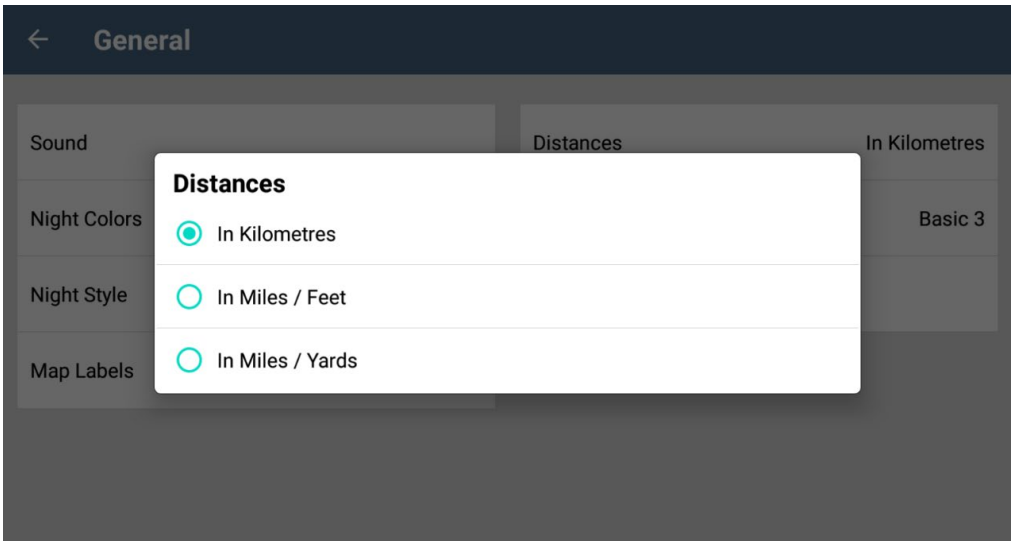



3 General Settings


3.1 Adjusting Navigation Volume and Warning Volume

You can adjust the navigation volume and warning volume by the following steps:

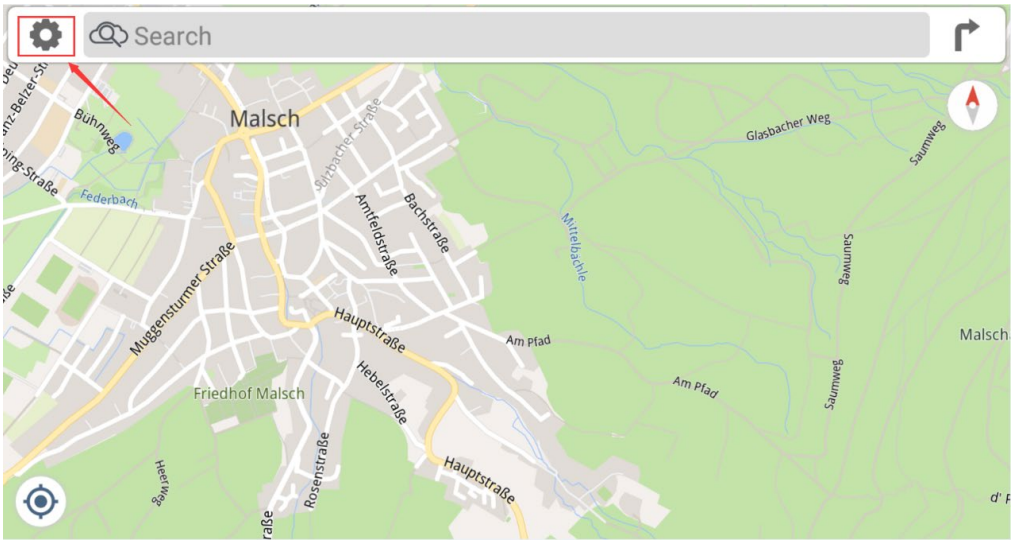


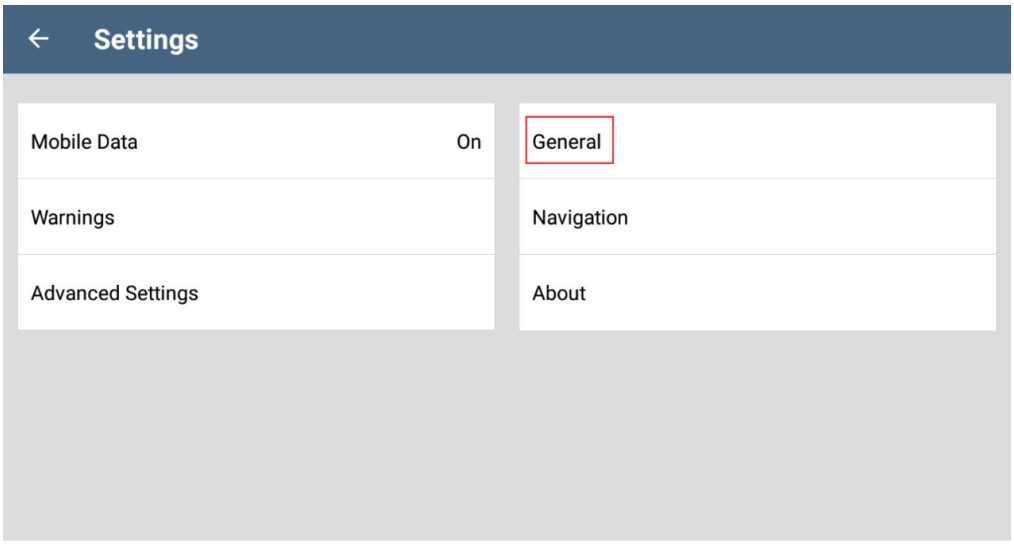

Settings
Mobile Data
On
Warnings
Advanced Settings
General
Navigation
About

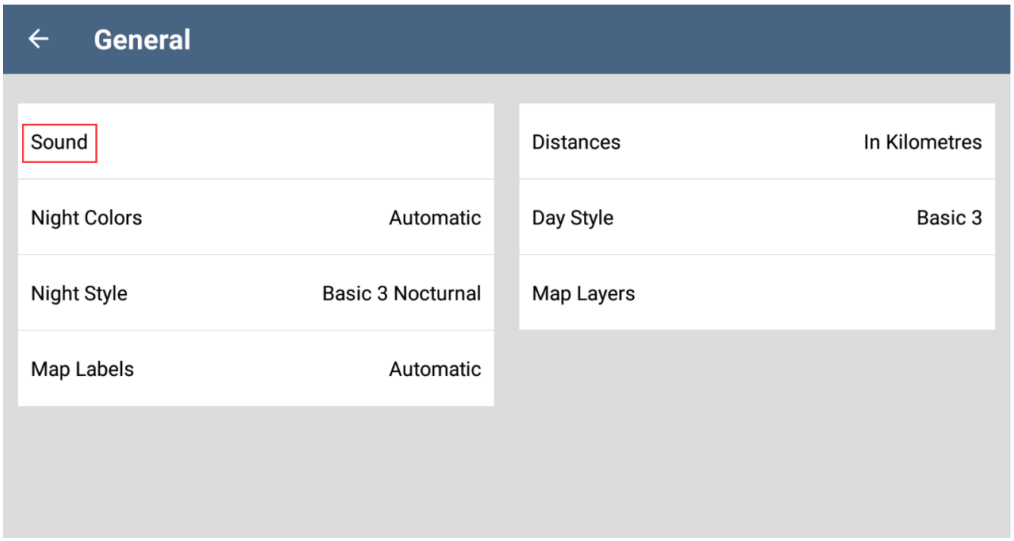

General
Sound
Night Colors
Automatic
Night Style
Basic 3 Nocturnal
Map Labels
Automatic
Distances
In Kilometres
Day Style
Basic 3
Map Layers

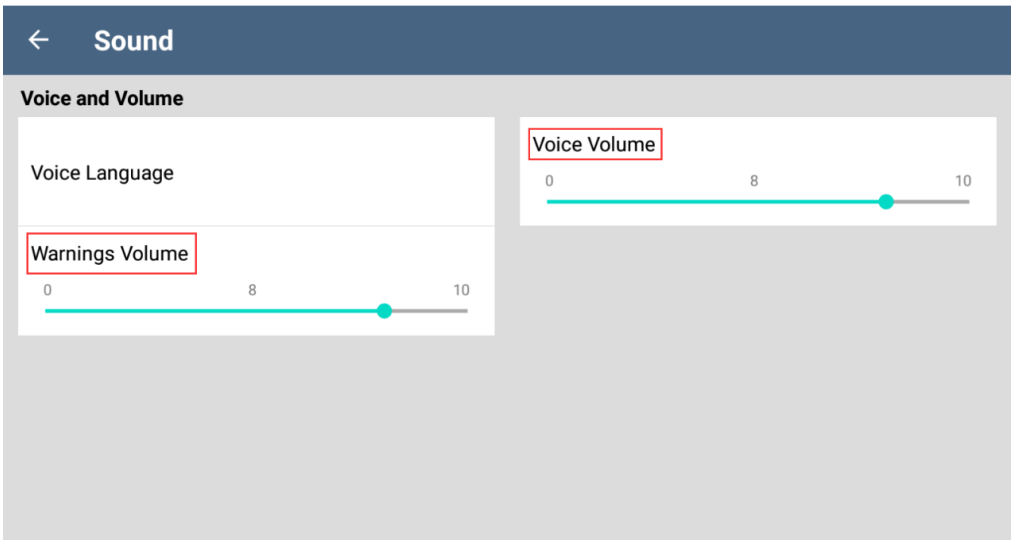

Sound
Voice and Volume
Voice Language
Warnings Volume
0
8
10
Voice Volume
0
8
10

3.2 2D and 3D Map Settings

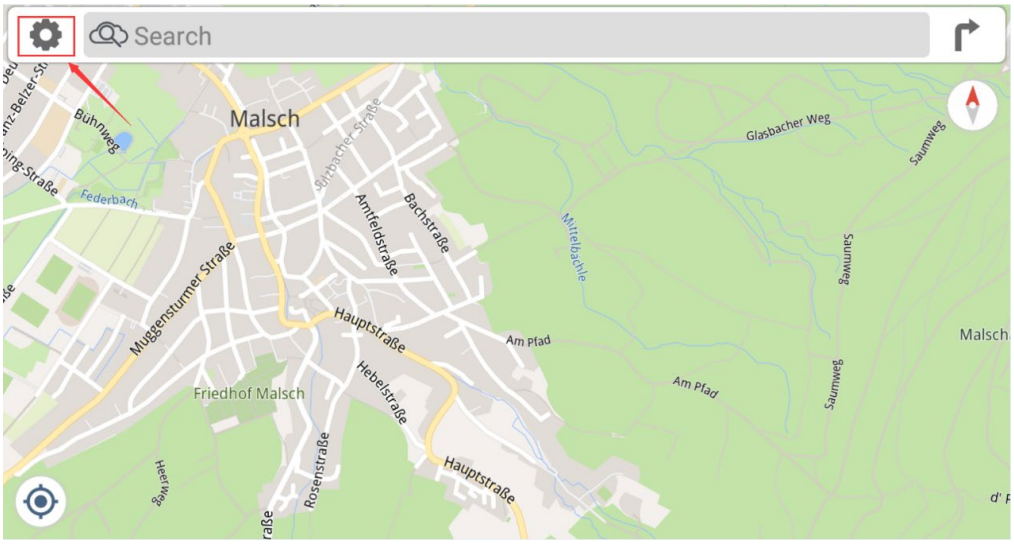

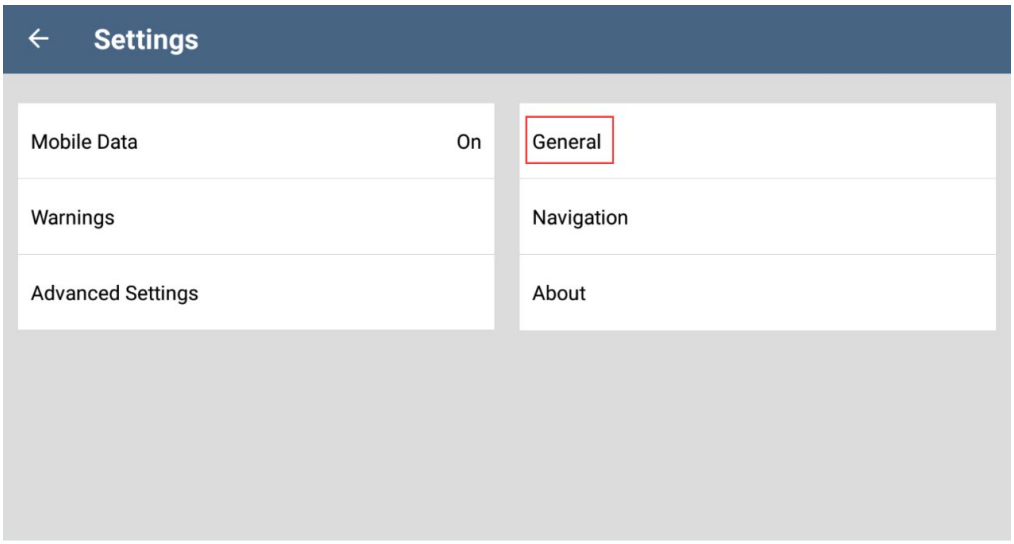

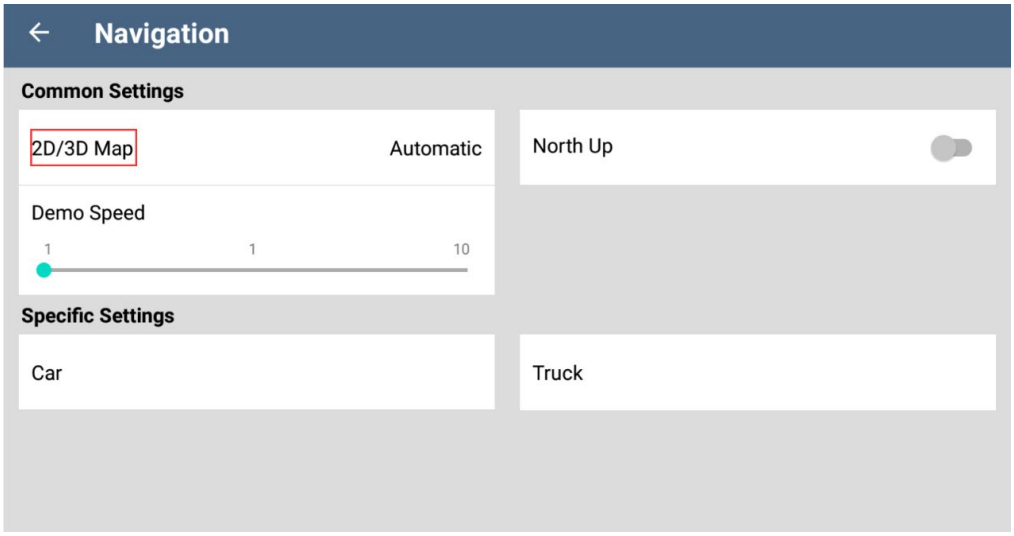

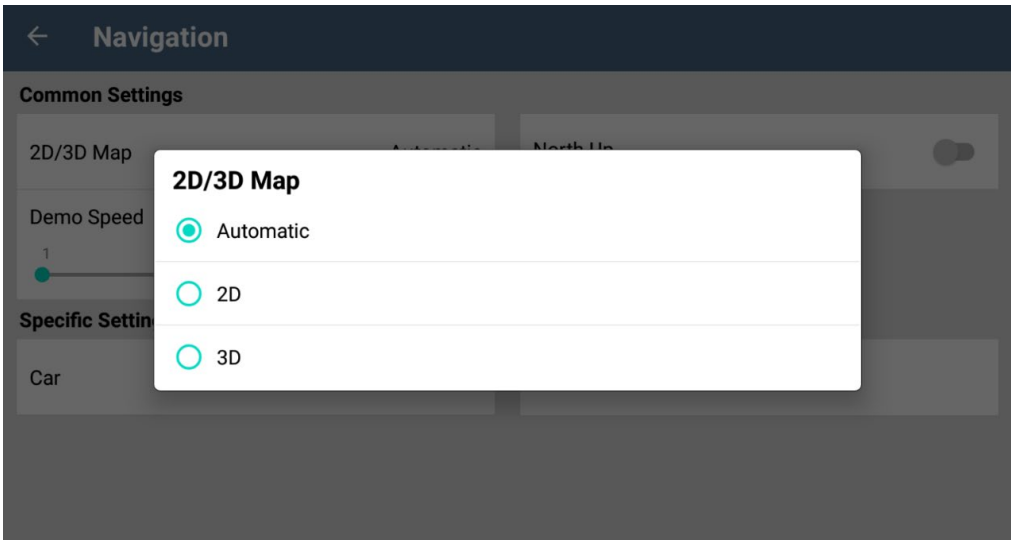

Automatic: The map switches from 3D to 2D when you are approaching an intersection or making a turn;
The map switches from 2D to 3D when you are going straight ahead at a higher speed and there are no turns

2D: 2D map display


3D: 3D map display


3.3 Smart Zoom Features


- While following a route: When approaching a turn, it zooms in and raises the view angle to let you easily recognize your next maneuver. If the next turn is at a distance, it zooms out and lowers the view angle to be flat so you can see the road in front of you.
- While driving without a planned route: Smart Zoom zooms in if you drive slowly and zooms out when you drive at a high speed.


3.4 Route Settings


You can select different route types by the following steps; This setting is permanent and will be used in your next trip if you do not change it by manually.

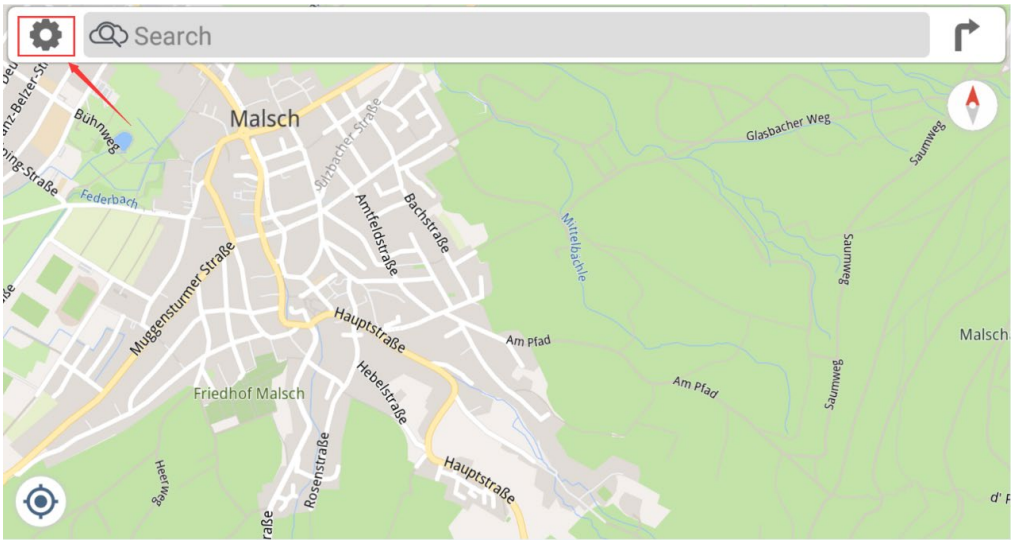

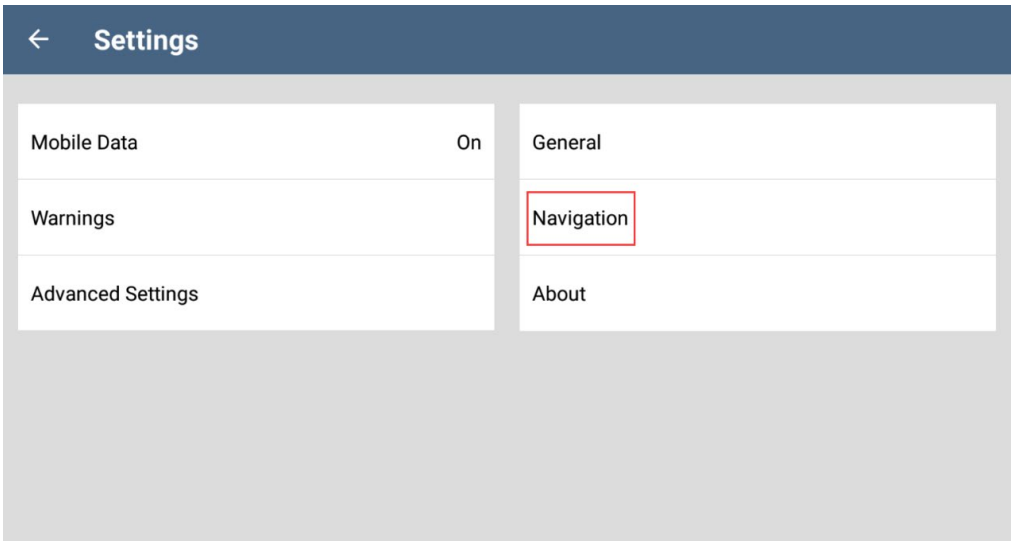


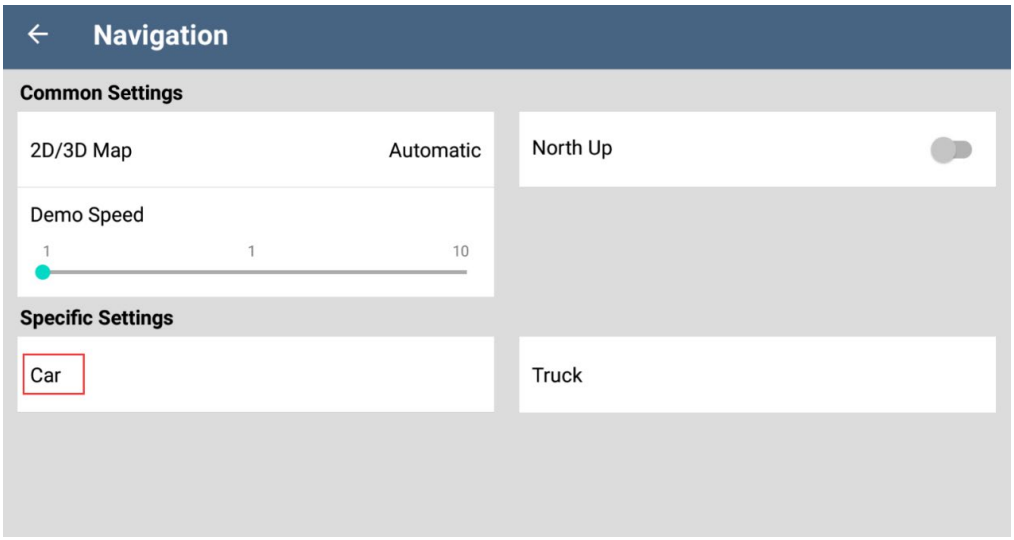
Navigation
Common Settings
2D/3D Map
Automatic
North Up
Demo Speed
1
1
10
Specific Settings
Car
Truck

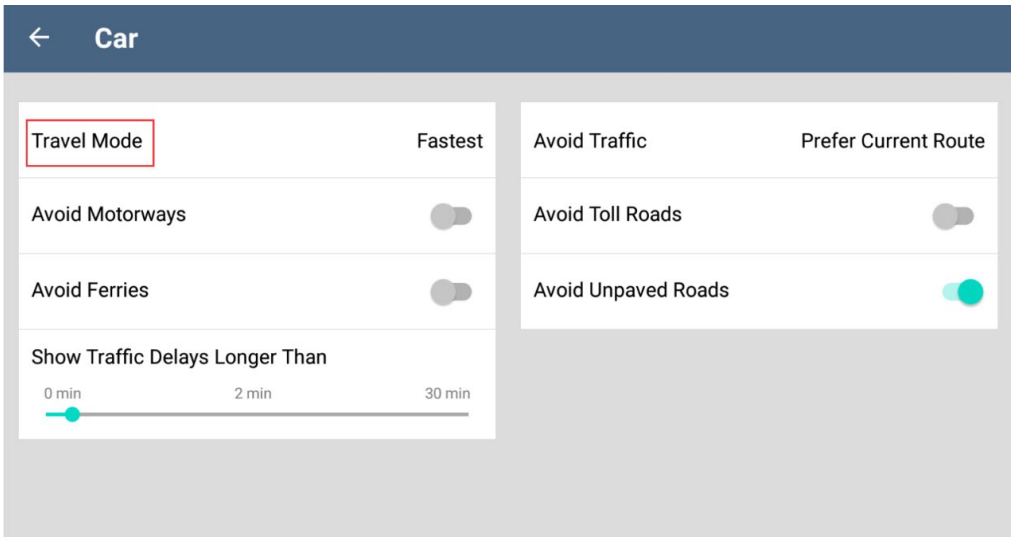
Car
Travel Mode
Fastest
Avoid Traffic
Prefer Current Route
Avoid Motorways
Avoid Toll Roads
Avoid Ferries
Avoid Unpaved Roads
Show Traffic Delays Longer Than
0 min
2 min
30 min

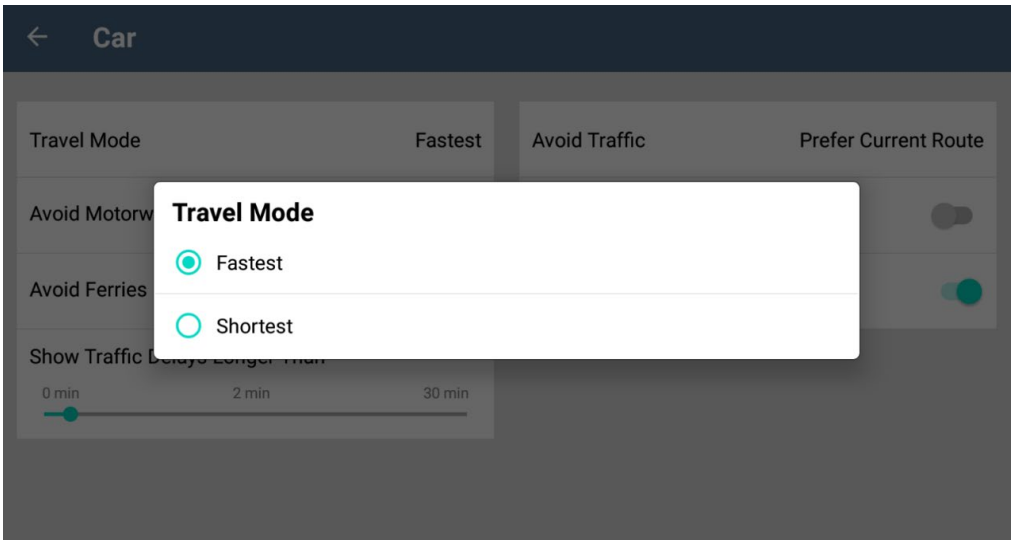

Car
Travel Mode
Fastest
Avoid Traffic
Prefer Current Route
Travel Mode
Fastest
Shortest
0 min
2 min
30 min


Also you can set the scenes you want to avoid on your trip from this menu.

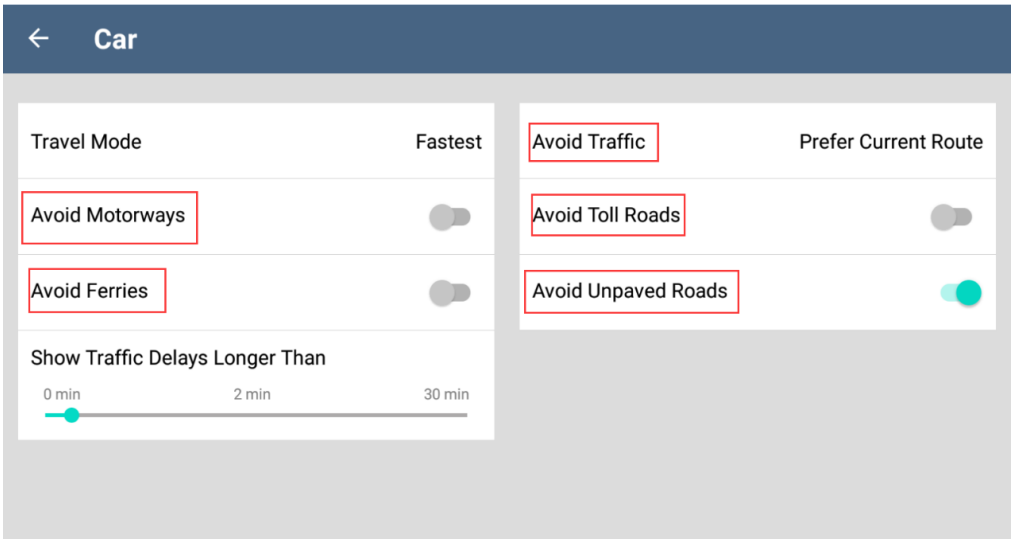



3.5 Truck Map Settings


You can set the truck data to avoid the no-passing areas by the following steps.

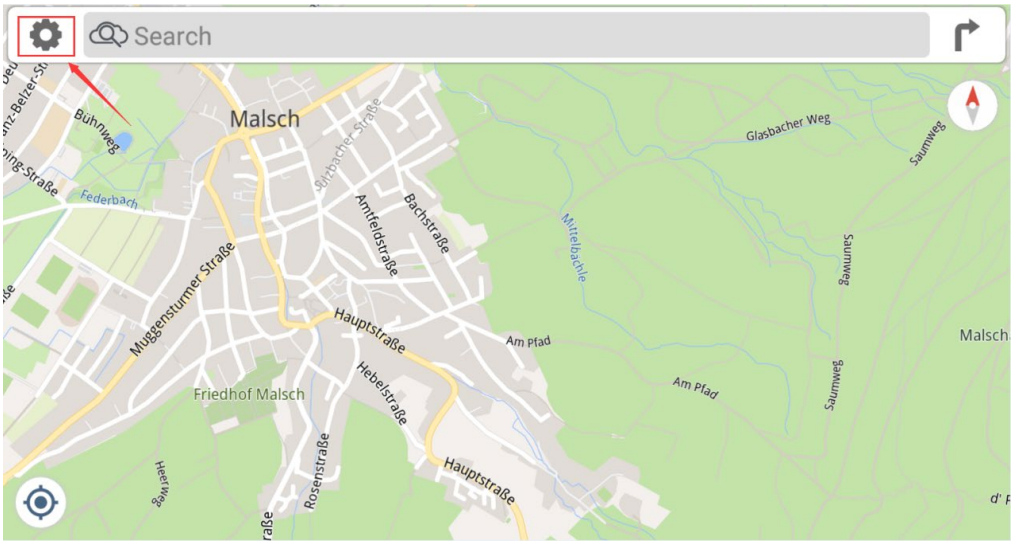

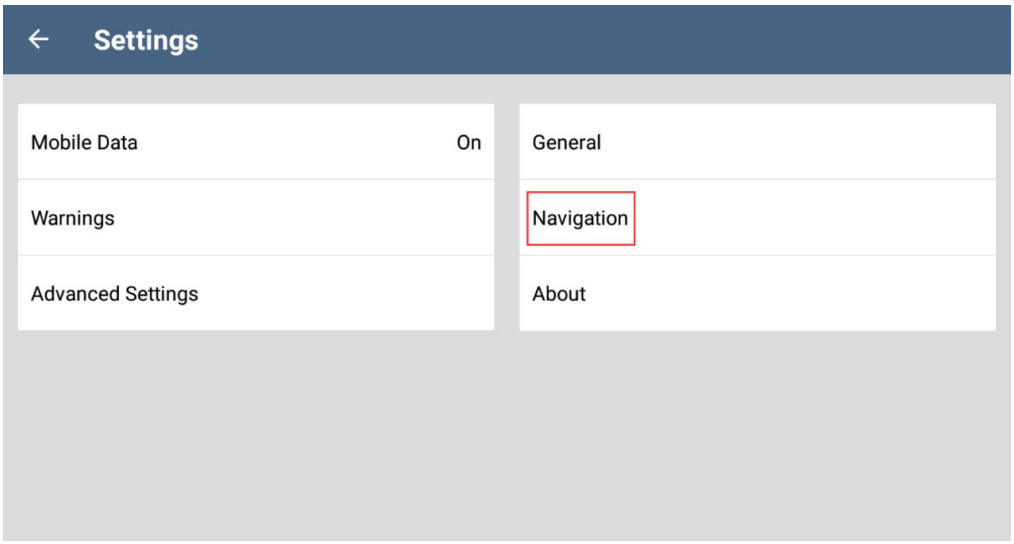
Settings
Mobile Data
On
Warnings
Advanced Settings
General
Navigation
About

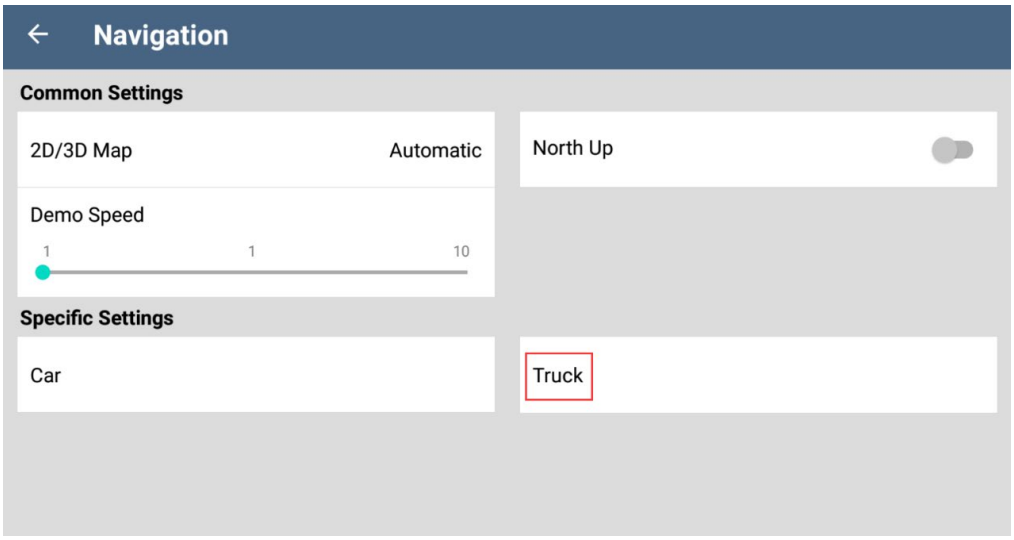

Navigation
Common Settings
2D/3D Map
Automatic
Demo Speed
1
1
10
North Up
Specific Settings
Car
Truck

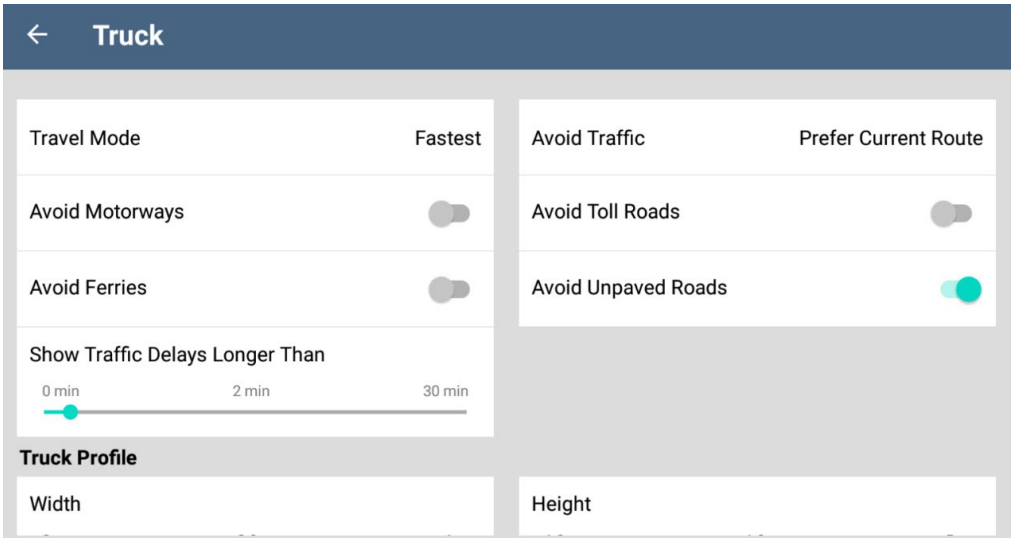

Truck
Travel Mode
Fastest
Avoid Motorways
Avoid Ferries
Show Traffic Delays Longer Than
0 min
2 min
30 min
Avoid Traffic
Prefer Current Route
Avoid Toll Roads
Avoid Unpaved Roads
Truck Profile
Width
Height

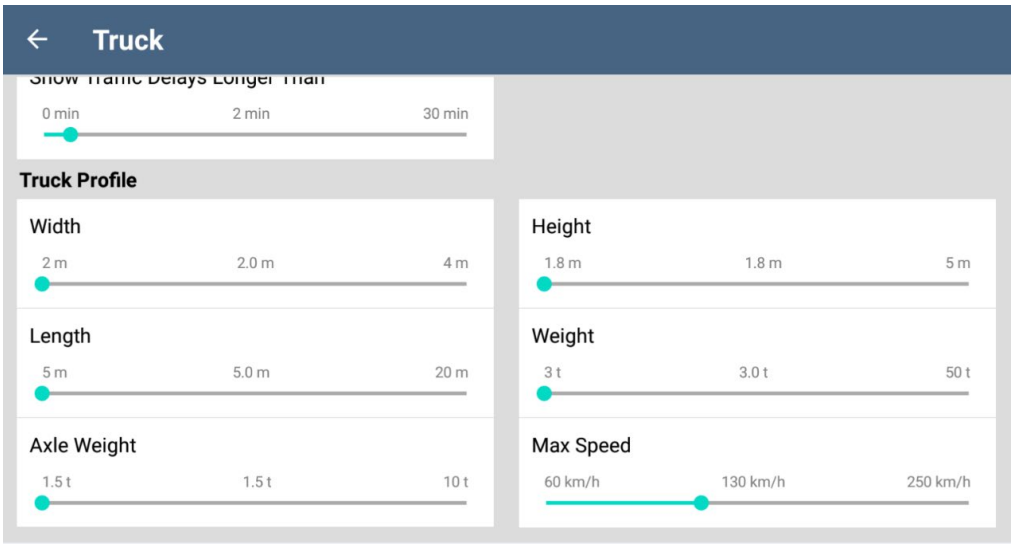



3.6 Speed Limit Warning

Dynaway navigation map contains information about the speed limits of the road segments. it is able to warn you if you exceed the current limit. This function may not be available for your region, you can delete the function by clicking “**Uninstall Speed Cameras**”.

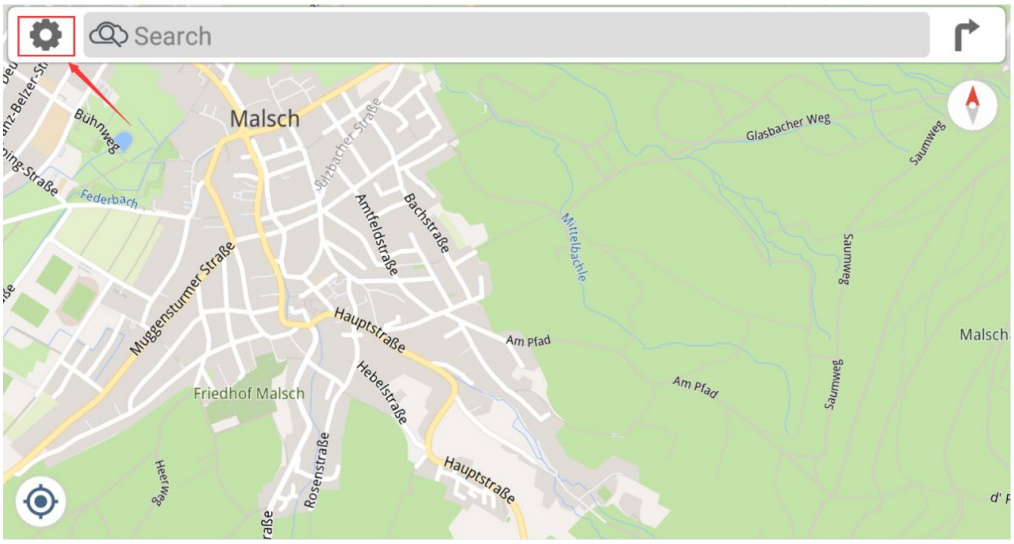

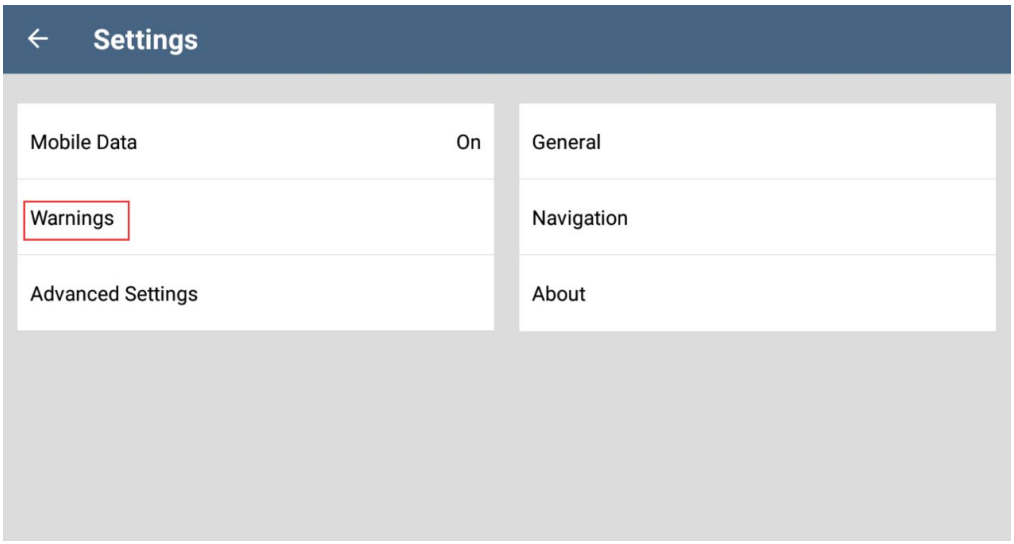

Settings
Mobile Data
On
Warnings
Advanced Settings
General
Navigation
About

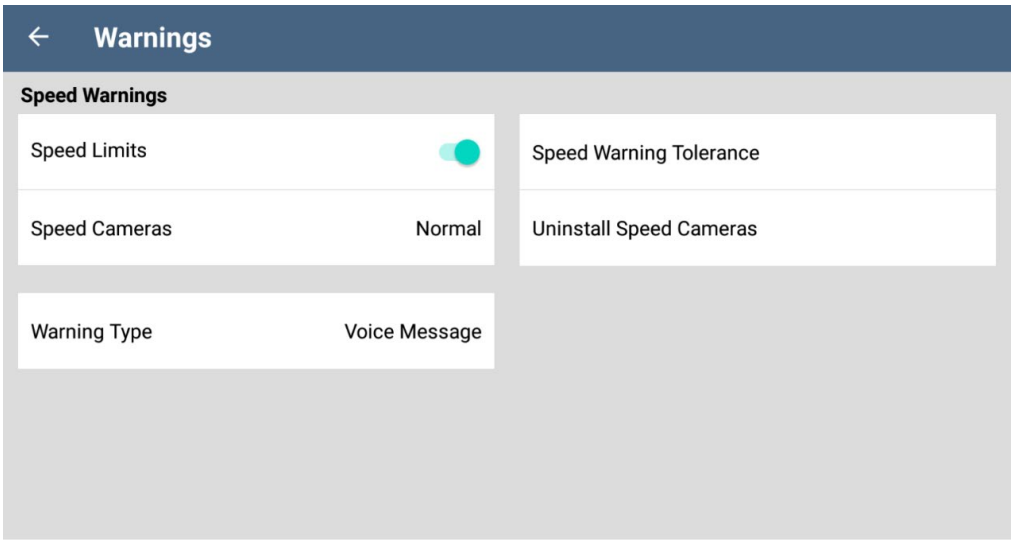
Warnings
Speed Warnings
Speed Limits
Speed Cameras
Normal
Warning Type
Voice Message
Speed Warning Tolerance
Uninstall Speed Cameras

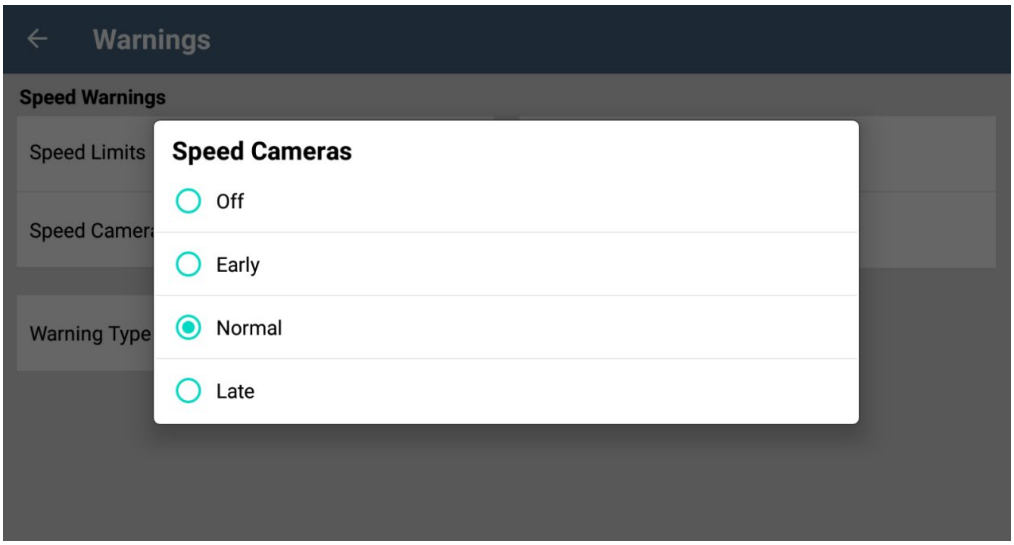

Warnings
Speed Warnings
Speed Limits
Speed Camera
Warning Type
Speed Cameras
Off
Early
Normal
Late

Off: Close warning speed limit camera alerts
Early / Normal / Late: Tap When to show warning speed limit camera alerts

Speed Warning Tolerance
You can use the slider bar to select the desired tolerance value.

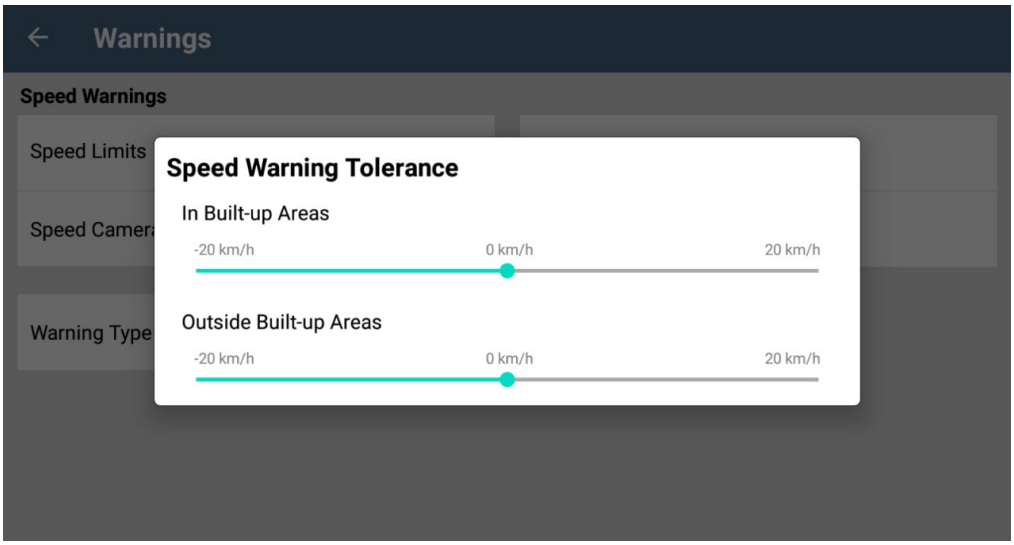


Warning Type

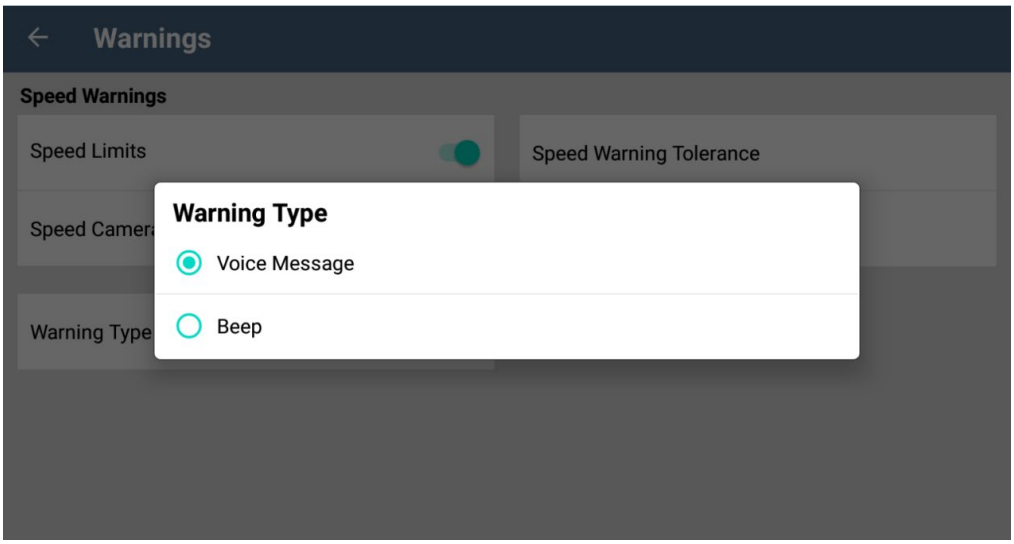


Voice Message: Warning alerts by voice
Beep: Warning alerts by beep sound

This function may not be available for your region, you can delete the function by the following steps.

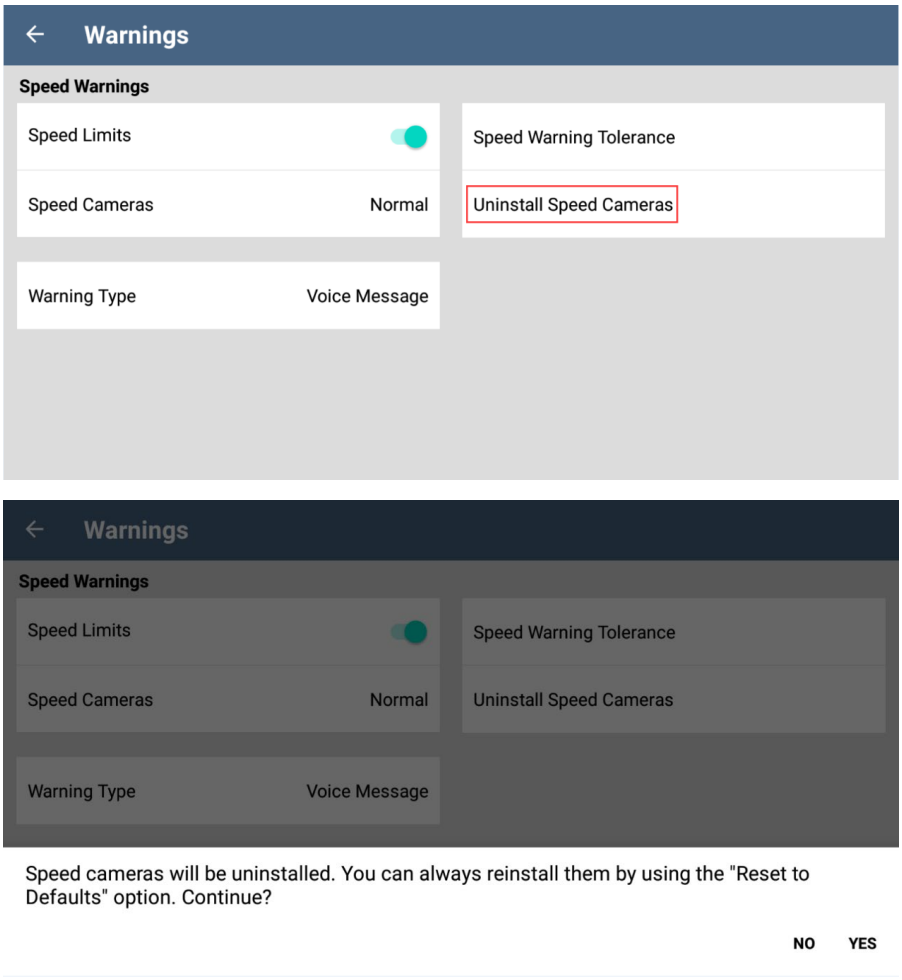


3.7 Online-TMC Function


Dynaway navigation software has Online-TMC function, you can use it when Dynavin radio is connected internet via Wi-Fi.

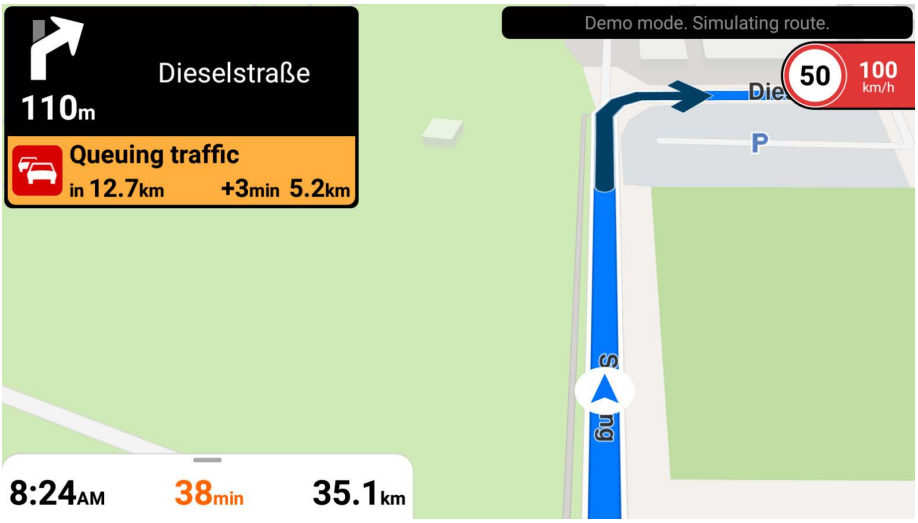

4 Start Navigation

Type the address in the search bar, it shows the result as below picture shown;

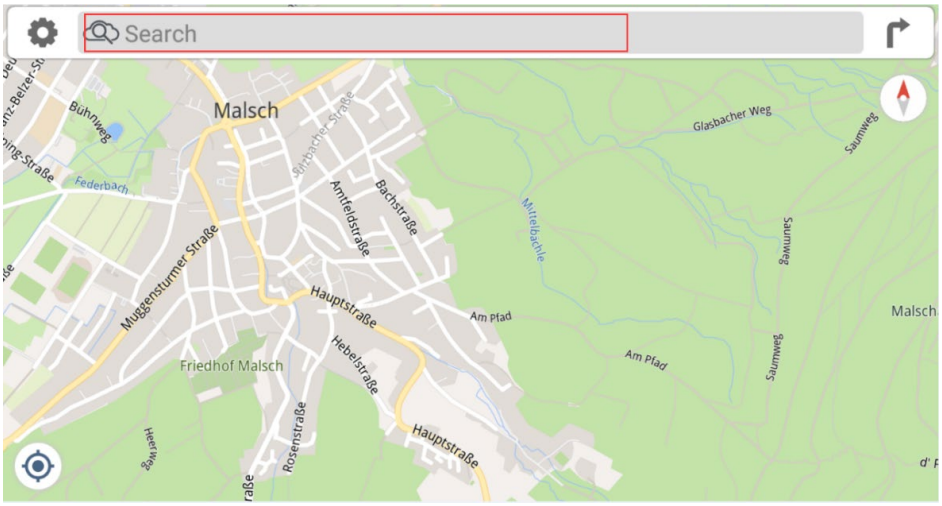

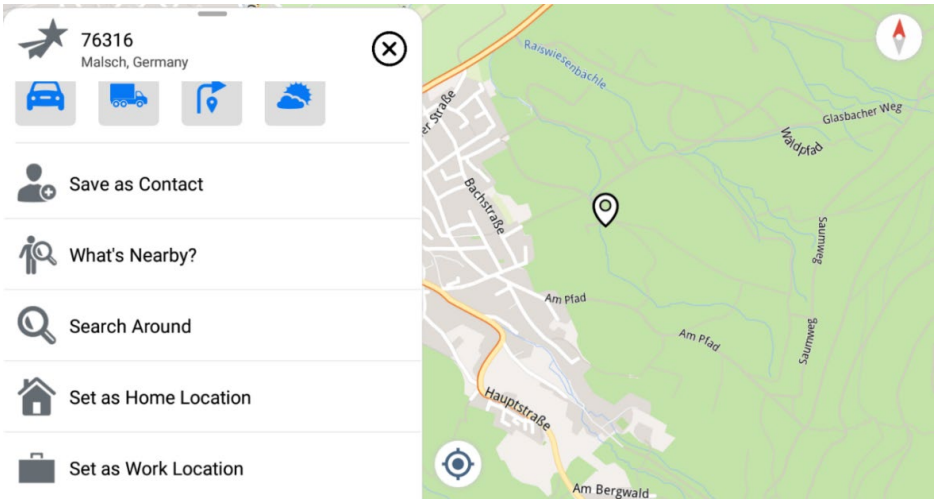

AutoDIGI support

A-autodigi OÜ
Tuuliku tee 4, 10621 Tallinn
info@autodigi.ee
www.autodigi.ee

English Dynaway navigation supplement
Original operating instructions and UI illustrations.
© 2022 Dynavin GmbH. All rights reserved.

Features reflect the original manual edition.
Functions and map licences depend on the purchased product.
Product-specific details are listed on the AutoDIGI product page.