

Assembly Instructions Ⓐ

01

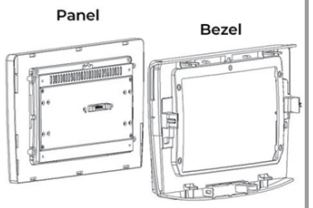


02

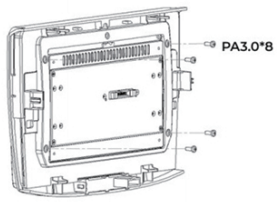


Attach the bezel on the panel with screws

03

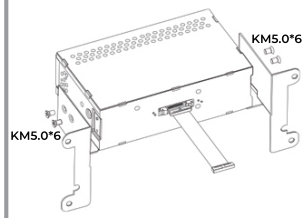


Attach the metal bracket on the headunit with screws

04

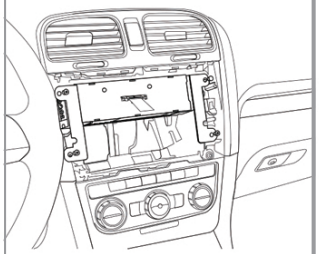


Attach the brackets with the original srews

05

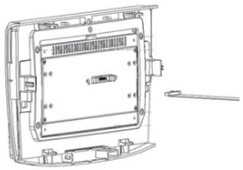



Connect the connection cable directly to the panel

06

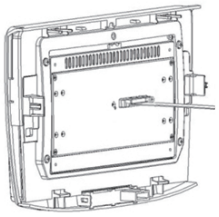



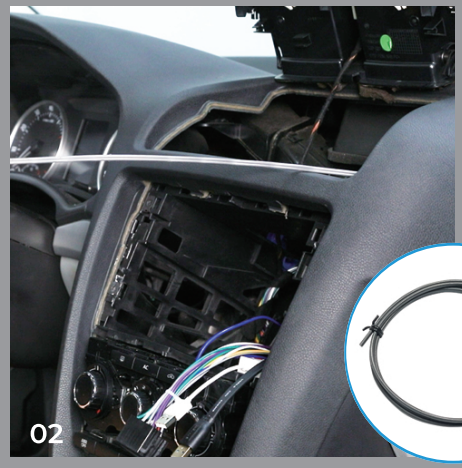

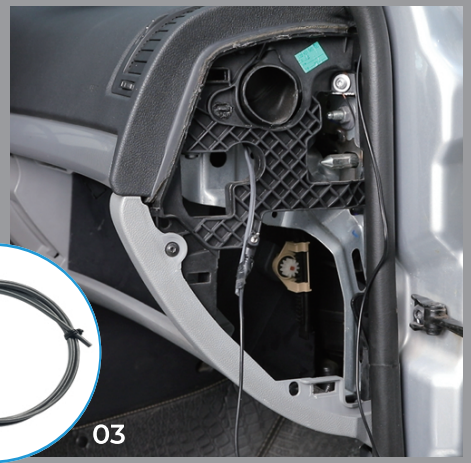



How to use fish tape?

Fascia and main-unit assembly A

The original manufacturer drawings are preserved. Panel and Bezel identify the panel and frame section. Follow the actual kit shape and fixings; this diagram does not replace vehicle disassembly instructions.

01. Align the panel and bezel as illustrated.

02. Attach the bezel to the panel with PA3.0 × 8 screws.

03. Attach the metal brackets to the head unit with KM5.0 × 6 screws.

04. Attach the brackets in the vehicle with the original screws.

05. Connect the connection cable directly to the panel.

06. Check the final arrangement of the panel, cable and unit against the illustration.

Using the fish tape: 01 feed it through a suitable opening; 02 guide it to the centre console; 03 attach the cable to be pulled; 04 carefully pull the cable into position. The photographs show the routing technique, not a specific vehicle disassembly sequence.

AutoDIGI · info@autodigi.ee