

Assembly Instructions Ⓑ

01

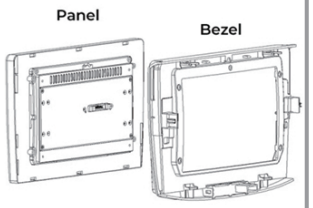


02

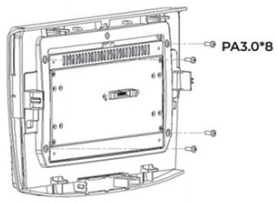


Attach the bezel on the panel with screws

03

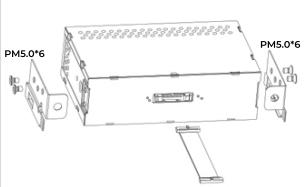


Attach the metal bracket on the headunit with screws

04

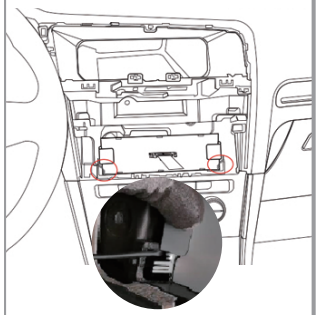


Bend the tabs of the left and right metal brackets with a flathead screwdriver

05

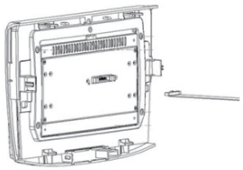



Connect the connection cable directly to the panel

06

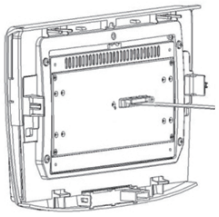



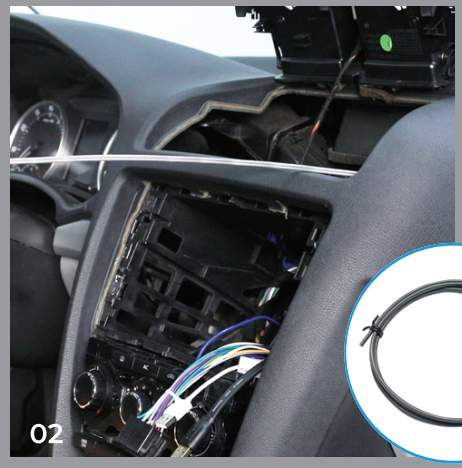

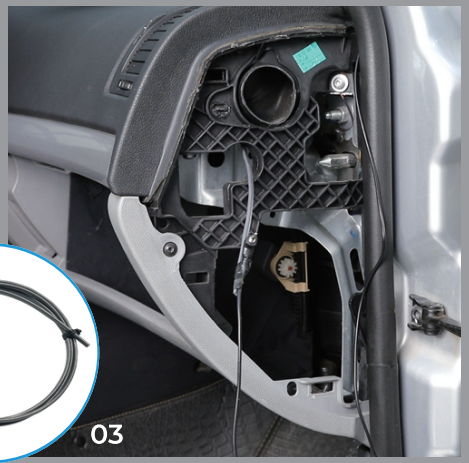



How to use fish tape?

Fascia and main-unit assembly

Diagram B: the original manufacturer drawings are preserved. Panel and Bezel identify the panel and frame section. Follow the actual kit shape and fixings; this diagram does not replace vehicle disassembly instructions.

01. Align the panel and bezel as illustrated.

02. Screw the bezel to the panel. The drawing identifies PA3.0 × 8 screws.

03. Screw the metal brackets to the main unit. The drawing identifies PM5.0 × 6 screws.

04. Bend the tabs on the left and right metal brackets into the illustrated position with a flat-head screwdriver.

05. Connect the connection cable directly to the panel.

06. Check the final arrangement of the panel, cable and unit against the illustration.

Using the fish tape: 01 feed it through a suitable opening; 02 guide it to the centre console; 03 attach the cable to be pulled; 04 carefully pull the cable into position. The photographs show the routing technique, not a specific VW model disassembly sequence.

Support and installation advice: info@autodigi.ee. Based on Dynavin Assembly Instructions B, English manufacturer drawing.