

Assembly Instructions (E)

01

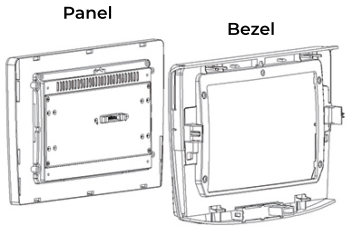


02

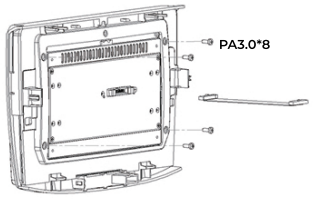


Attach the bezel on the panel with screws, then connect the connection cable directly to the panel

03

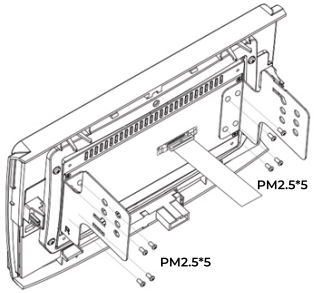


Attach the metal bracket on the panel with screws

04

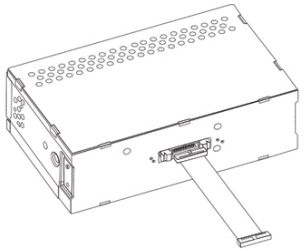


Connect the connection cable directly to the the headunit


05

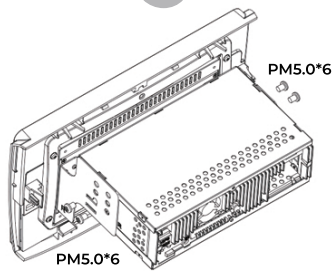

The screen mounting bracket has several options to allow the installer to adjust the chassis height position. Please use the chassis position that best suits the installation application.



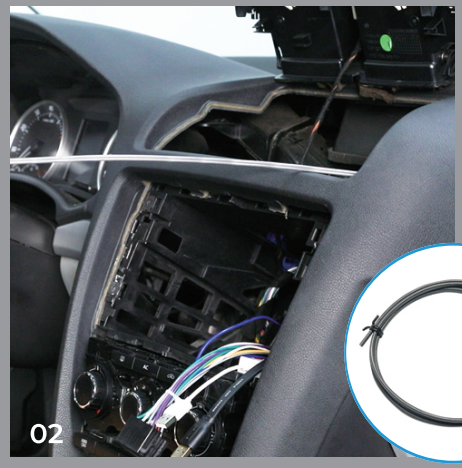

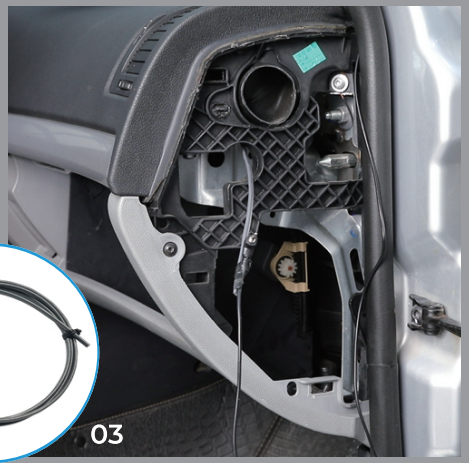



How to use fish tape?

Fascia and main-unit assembly E

The original manufacturer drawings are preserved. Panel and Bezel identify the panel and frame section. Follow the actual kit shape and fixings; this diagram does not replace vehicle disassembly instructions.

01. Align the panel and bezel as illustrated.

02. Attach the bezel to the panel with PA3.0 × 8 screws, then connect the connection cable directly to the panel.

03. Attach the metal brackets to the panel with PM2.5 × 5 screws.

04. Connect the connection cable directly to the head unit.

05. The screen mounting bracket has several positions to adjust the chassis height. Choose the position that best suits the installation and secure it with the illustrated PM5.0 × 6 screws.

Using the fish tape: 01 feed it through a suitable opening; 02 guide it to the centre console; 03 attach the cable to be pulled; 04 carefully pull the cable into position. The photographs show the routing technique, not a specific vehicle disassembly sequence.

AutoDIGI · info@autodigi.ee