

# Assembly Instructions (E)

01

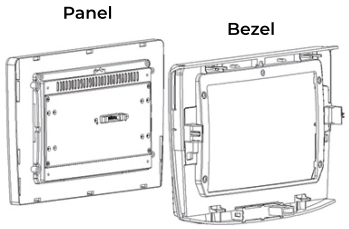



02

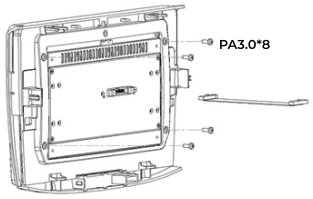



Attach the bezel on the panel with screws, then connect the connection cable directly to the panel

03

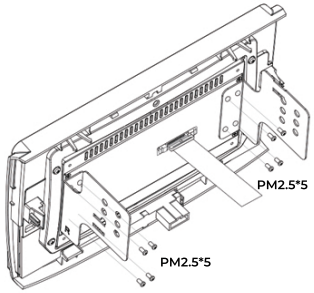



Attach the metal bracket on the panel with screws

04

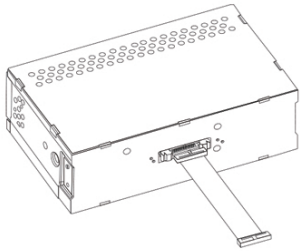


Connect the connection cable directly to the the headunit


05

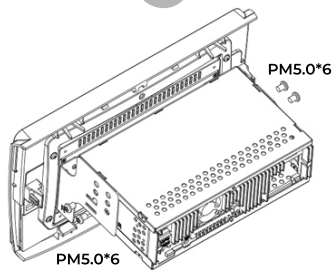


The screen mounting bracket has several options to allow the installer to adjust the chassis height position. Please use the chassis position that best suits the installation application.



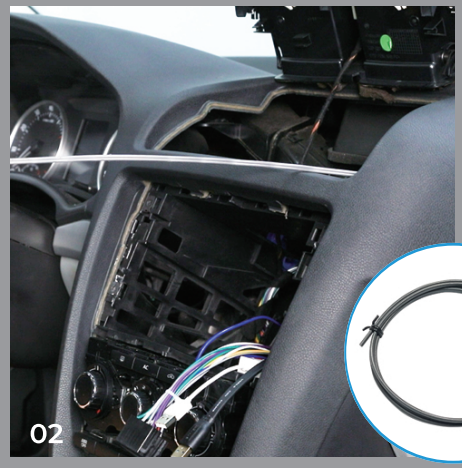

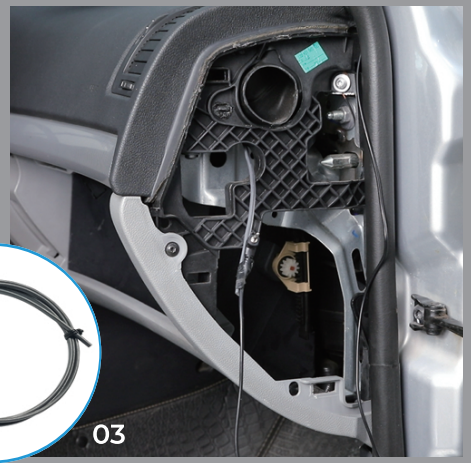

## How to use fish tape?

# Paneeli ja põhiseadme montaaž E

Tootja joonised on säilitatud muutmata. Panel tähendab paneeli ja Bezel raamiosa. Järgi oma komplekti kuju ja kinnitusi; joonis ei asenda auto eemaldusjuhendit.

01. Joonda paneel ja raamiosa joonise järgi.

02. Kinnita raamiosa paneelile kruvidega PA3.0 × 8 ning ühenda ühenduskaabel otse paneeliga.

03. Kinnita metallkronsteinid paneelile kruvidega PM2.5 × 5.

04. Ühenda ühenduskaabel otse põhiseadmega.

05. Ekraani kronsteini erinevad kinnitusavad võimaldavad reguleerida seadmekorpuse kõrgust. Vali paigaldusele sobivaim asend ja kinnita joonisel näidatud kruvidega PM5.0 × 6.

Juhtmevedru kasutamine: 01 vii vedru läbi sobiva ava; 02 juhi see keskkonsoolini; 03 kinnita veetav juhe vedru külge; 04 tõmba juhe ettevaatlikult sihtkohta. Fotod näitavad töövõtet, mitte ühe kindla automudeli eemaldusjärjekorda.

AutoDIGI · info@autodigi.ee