

Assembly Instructions (E)

01

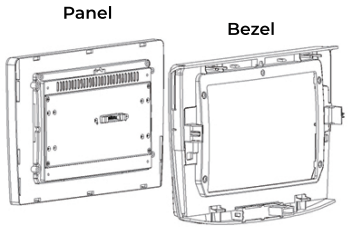


02

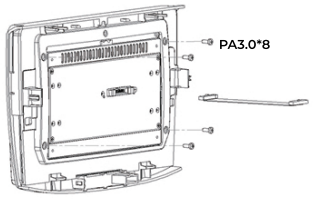


Attach the bezel on the panel with screws, then connect the connection cable directly to the panel

03

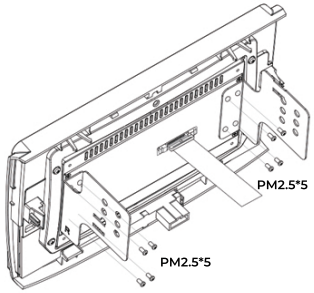


Attach the metal bracket on the panel with screws

04

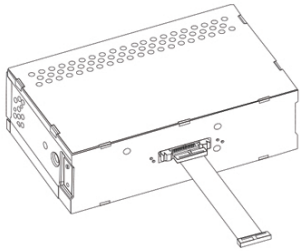


Connect the connection cable directly to the the headunit


05

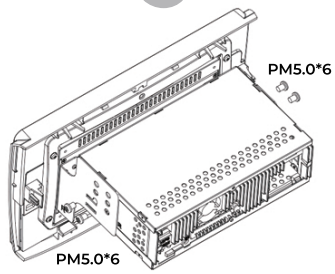

The screen mounting bracket has several options to allow the installer to adjust the chassis height position. Please use the chassis position that best suits the installation application.



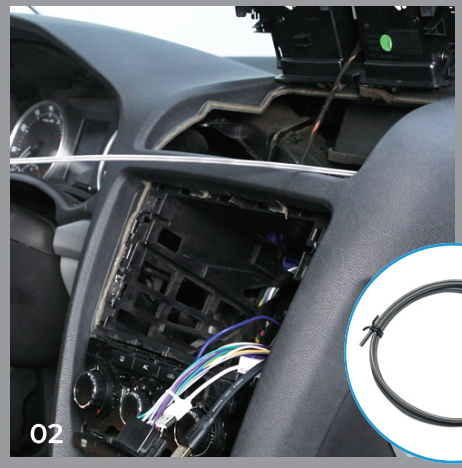

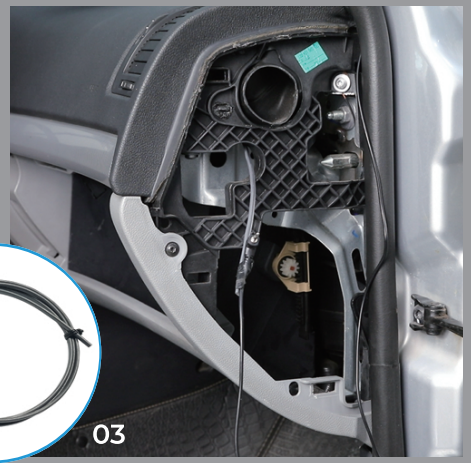



How to use fish tape?

Сборка панели и основного блока E

Оригинальные иллюстрации сохранены без изменений. Panel означает панель, Bezel — рамку. Учитывайте форму и крепления комплекта; схема не заменяет инструкцию разборки автомобиля.

01. Совместите панель и рамку по рисунку.

02. Прикрепите рамку к панели винтами PA3.0 × 8, затем подключите кабель непосредственно к панели.

03. Прикрепите металлические кронштейны к панели винтами PM2.5 × 5.

04. Подключите соединительный кабель непосредственно к головному устройству.

05. Кронштейн экрана имеет несколько положений для регулировки высоты корпуса. Выберите наиболее подходящее положение и закрепите его показанными винтами PM5.0 × 6.

Протяжка проводов: 01 проведите протяжку через подходящее отверстие; 02 выведите её к центральной консоли; 03 закрепите провод; 04 осторожно протяните его на место. Фотографии показывают способ работы, а не порядок разборки конкретной модели.

AutoDIGI · info@autodigi.ee