

V10W2 Assembly Instruction

1

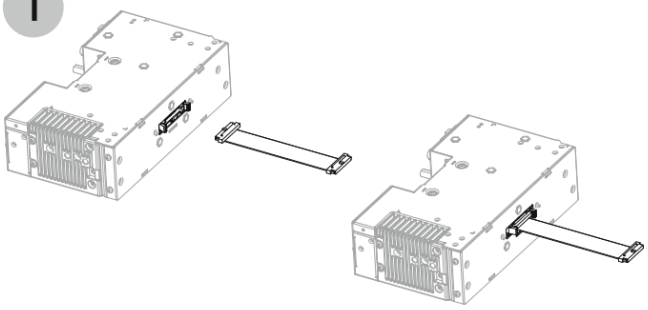


Connect the connection cable to the main unit

2

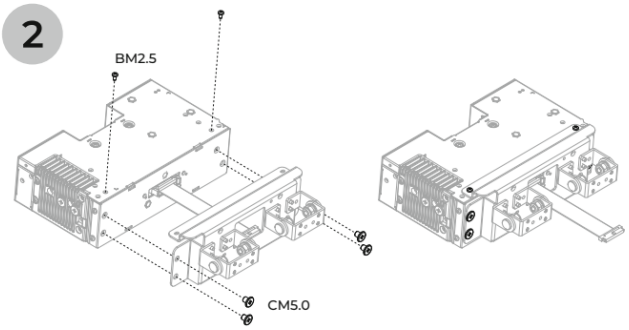


Put the main unit and rotary damper together

3

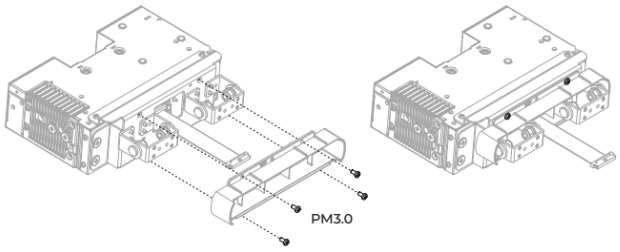


Put the main unit and rotary damper together

4

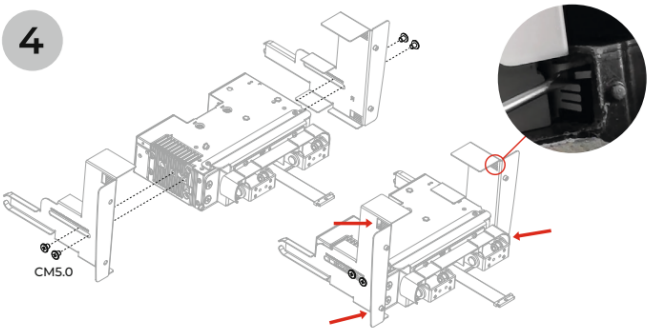


Put the main unit and mounting plates together and bend the tabs of the metal bracket at the 4 corners with a flathead screwdriver in the car

5

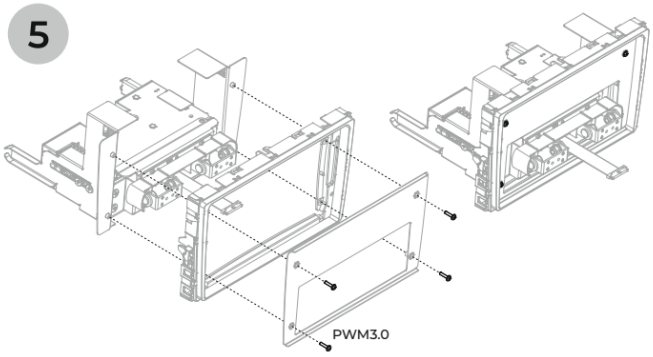


Put the main unit and radio bezel together

6

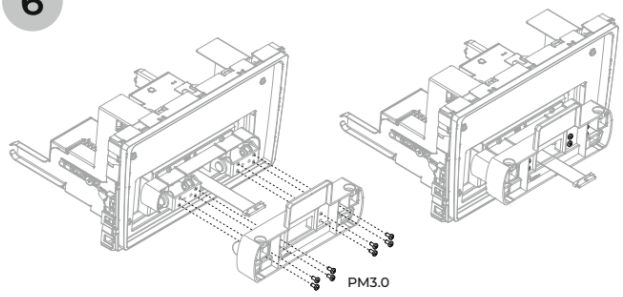


Put the radio main unit and monitor stand together

7

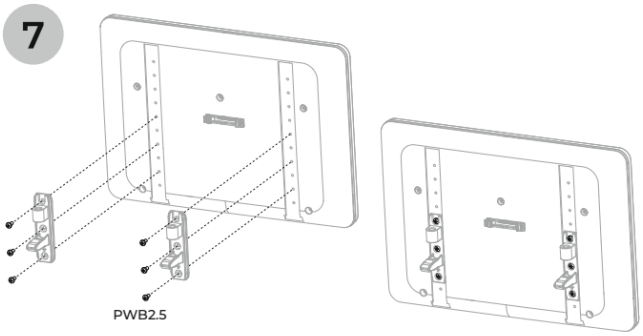

Put the display and the display holder together

8

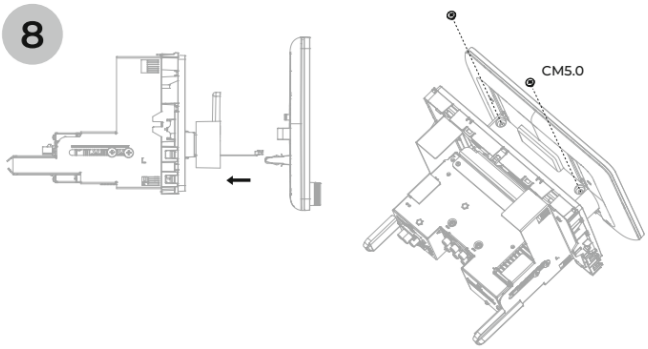

Install the radio main unit and fix the display

V10W2 — Assembly instructions

The diagram numbers correspond to the steps below. Use the screw type and size shown for each diagram, such as CM5.0, PM3.0 or PWB2.5. Original Car Screws means the vehicle’s original screws. The manufacturer diagrams are preserved unchanged.

1. Connect the connection cable to the main unit.

2. Assemble the main unit and rotary damper as illustrated.

3. Assemble the main unit and rotary damper as illustrated.

4. Assemble the main unit and mounting plates. In the vehicle, bend the metal bracket tabs at all four corners with a flathead screwdriver as illustrated.

5. Put the main unit and radio bezel together.

6. Put the radio main unit and monitor stand together.

7. Put the display and display holder together.

8. Install the radio main unit and secure the display.