

V10W2 Assembly Instruction

1

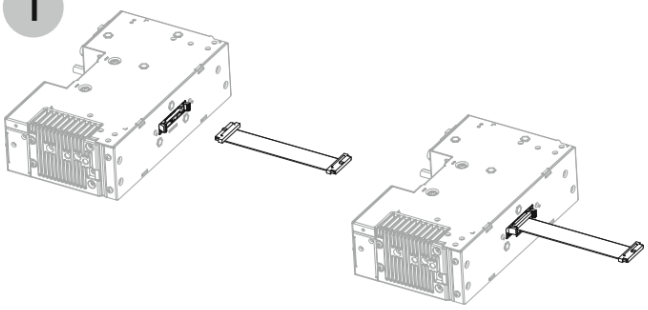


Connect the connection cable to the main unit

2

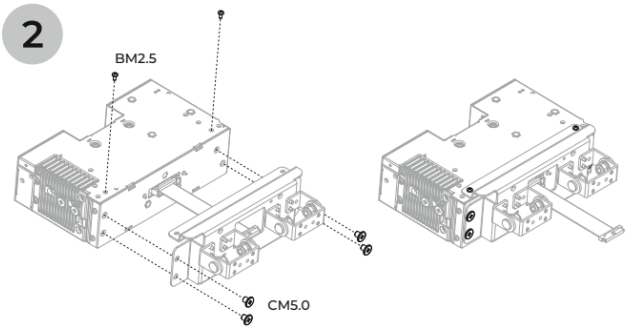


Put the main unit and rotary damper together

3

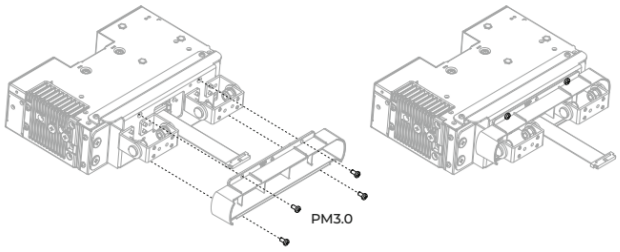


Put the main unit and rotary damper together

4

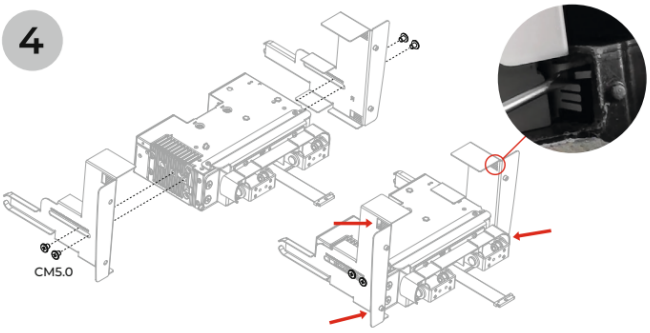


Put the main unit and mounting plates together and bend the tabs of the metal bracket at the 4 corners with a flathead screwdriver in the car

5

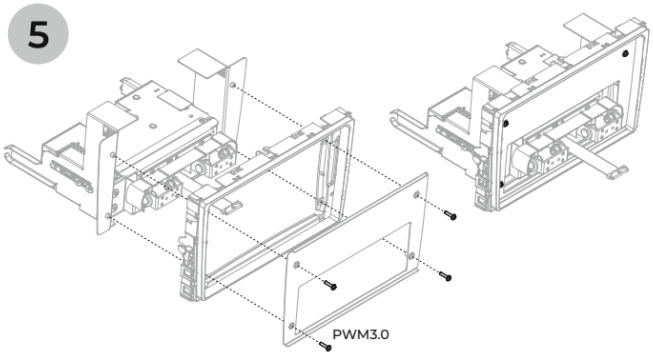


Put the main unit and radio bezel together

6

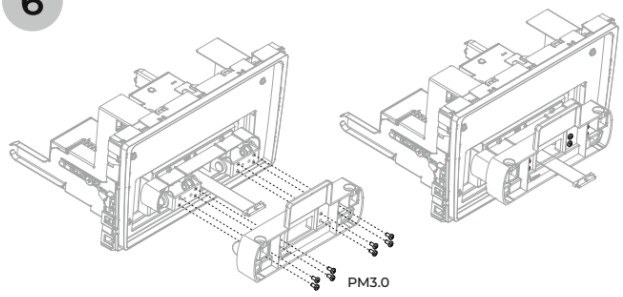


Put the radio main unit and monitor stand together

7

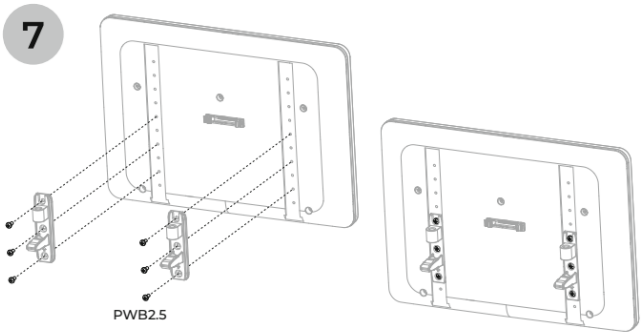

Put the display and the display holder together

8

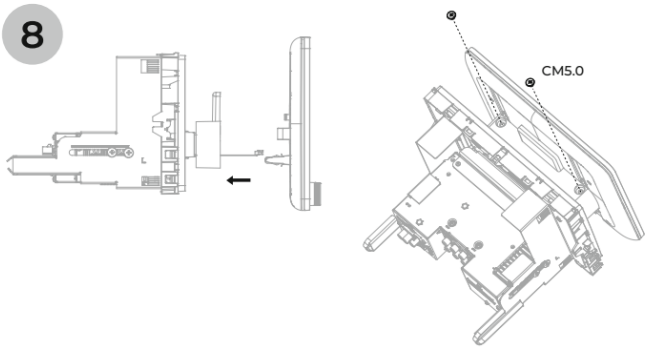

Install the radio main unit and fix the display

V10W2 — Asennusohje

Kuvien numerot vastaavat alla olevia vaiheita. Käytä kunkin kuvan yhteydessä ilmoitettua ruuvityyppiä ja kokoa (esimerkiksi CM5.0, PM3.0, PWB2.5). Original Car Screws tarkoittaa auton alkuperäisiä ruuveja. Valmistajan kuvat on säilytetty muuttamattomina.

1. Liitä yhdyskaapeli päälaitteeseen.

2. Yhdistä päälaite ja vaimennettu kääntökiinnike kuvan mukaan.

3. Yhdistä päälaite ja vaimennettu kääntökiinnike kuvan mukaan.

4. Yhdistä päälaite ja asennuslevyt. Taivuta autossa metallikiinnikkeen neljän kulman kiinnityskielekkeet talttapäisellä ruuvimeisselillä kuvan mukaan.

5. Yhdistä päälaite ja radiokehys.

6. Yhdistä päälaite ja näytön tukikiinnike.

7. Kiinnitä näyttö näytön pidikkeeseen.

8. Asenna radion päälaite ja kiinnitä näyttö.