

V10W2 Assembly Instruction

1

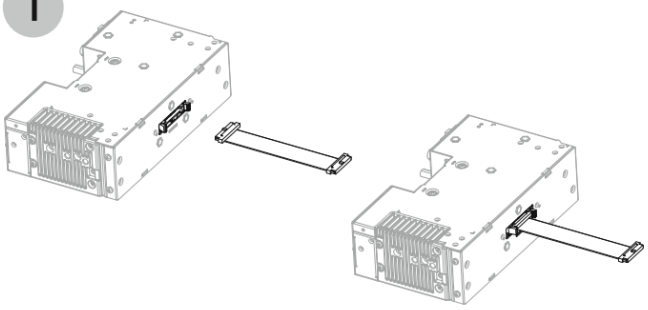


Connect the connection cable to the main unit

2

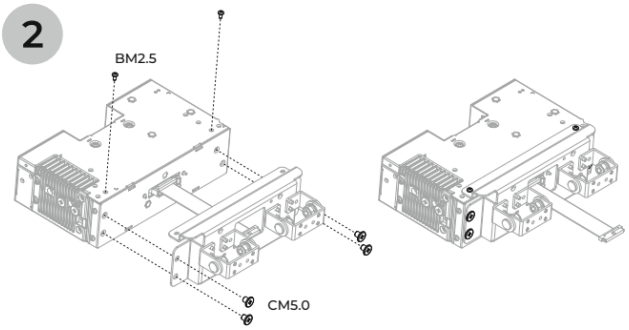


Put the main unit and rotary damper together

3

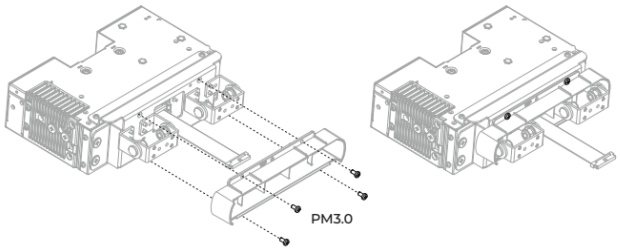


Put the main unit and rotary damper together

4

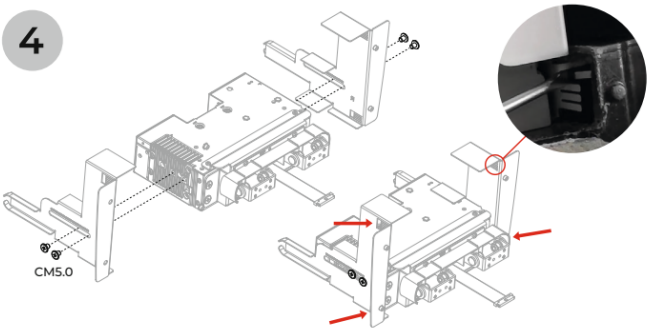


Put the main unit and mounting plates together and bend the tabs of the metal bracket at the 4 corners with a flathead screwdriver in the car

5

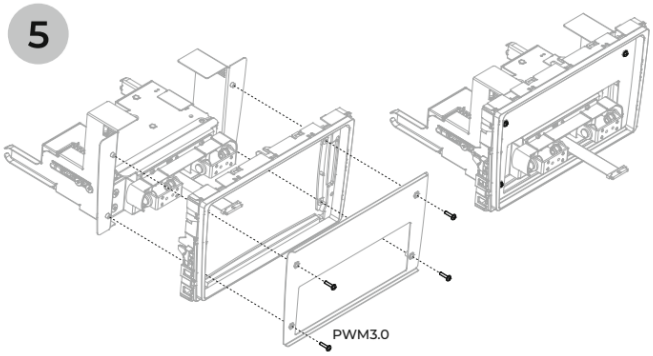


Put the main unit and radio bezel together

6

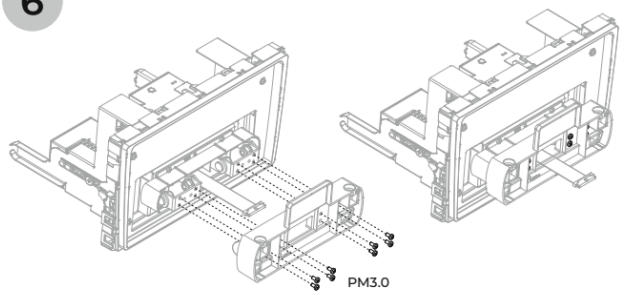


Put the radio main unit and monitor stand together

7

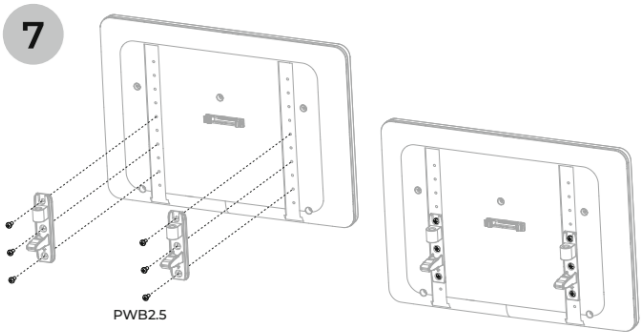

Put the display and the display holder together

8

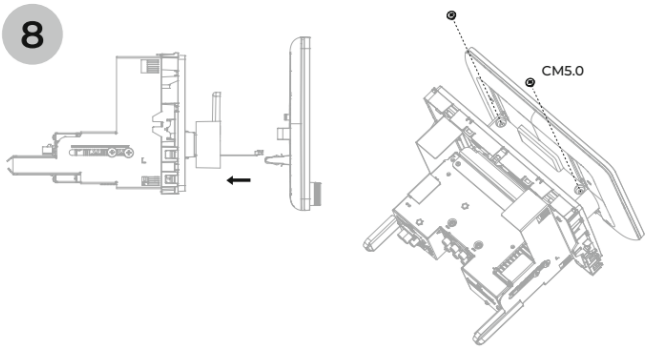

Install the radio main unit and fix the display

V10W2 — Инструкция по монтажу

Номера рисунков соответствуют этапам ниже. Используйте тип и размер винтов, указанные на соответствующем рисунке, например CM5.0, PM3.0 или PWB2.5. Original Car Screws означает штатные винты автомобиля. Иллюстрации производителя сохранены без изменений.

1. Подключите соединительный кабель к головному устройству.

2. Соедините головное устройство и поворотный демпфер по рисунку.

3. Соедините головное устройство и поворотный демпфер по рисунку.

4. Соедините головное устройство и монтажные пластины. В автомобиле отогните язычки металлического кронштейна в четырёх углах плоской отвёрткой по рисунку.

5. Соедините головное устройство и рамку магнитолы.

6. Соедините радиоблок и опору дисплея.

7. Соедините дисплей и держатель дисплея.

8. Установите радиоблок и закрепите дисплей.