
AutoDIGI

Original VW camera adapter

DVN-VCR-A · Installation guide

The adapter is compatible with all aftermarket head units that have an RCA input for the camera picture. Vehicles on the MQB platform or with a factory MIB2 head unit do not need this adapter: factory-camera support is already included in the new wiring harness.

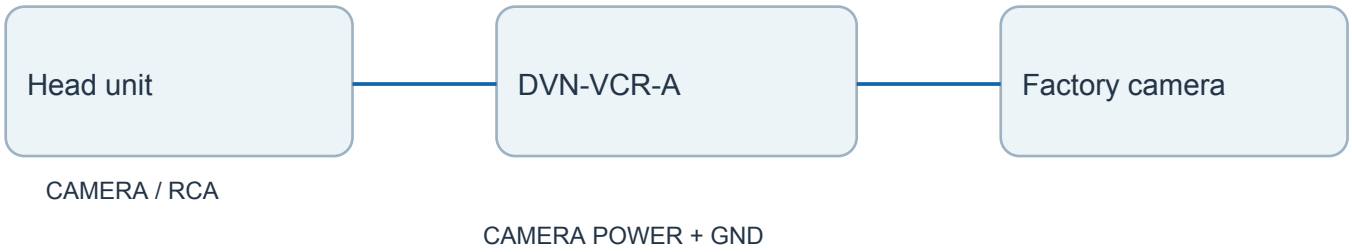

Connections and settings

1. Connect the factory camera plug to the corresponding adapter connection.

2. Connect the adapter’s yellow RCA video plug to the head unit’s reversing-camera input (CAMERA).

3. Connect CAMERA POWER to the appropriate camera power output and GND to ground. Follow the head unit wiring diagram; the manufacturer’s guide does not specify a supply voltage here.

4. Default DIP setting: switches 1, 2, 3 and 4 = ON. If no picture appears, move all four switches to the upper position: switches 1, 2, 3 and 4 = OFF.

All four switches together: ON → no picture → OFF (upper position)

REVERSE is the head unit’s reverse-trigger connection. In the manufacturer’s diagram it does not replace the adapter’s RCA video signal. This schematic overview does not replace the wiring instructions for the particular head unit.

AutoDIGI connection overview based on the manufacturer’s guide (30 October 2026).